



Driveshaft — 4.0L

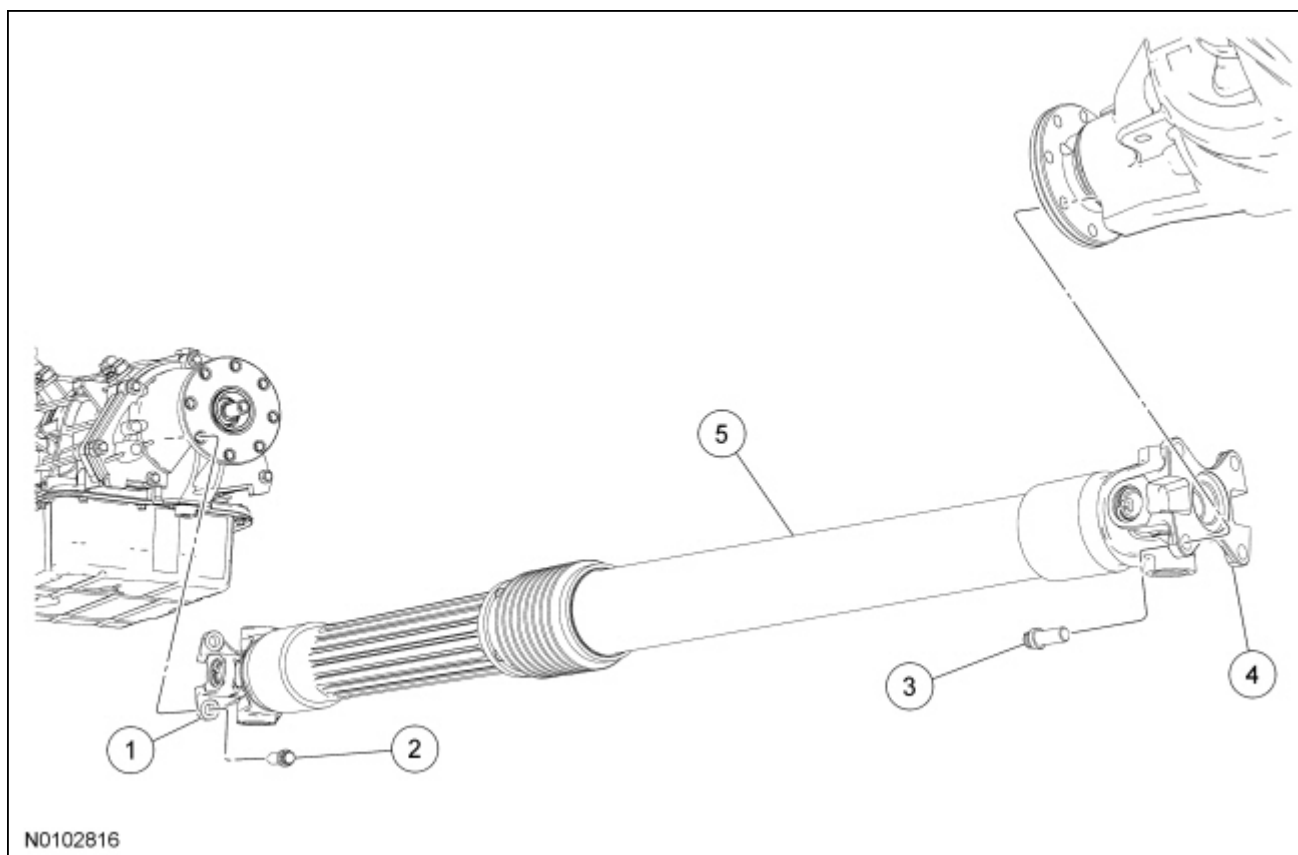



Item	Part Number	Description
1	—	Front driveshaft flange (part of 4602)
2	N800594	Front driveshaft flange bolt (4 required)
3	N800594	Rear driveshaft flange bolt (4 required)
4	—	Rear driveshaft flange (part of 4602)
5	4602	Driveshaft

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. Index-mark the driveshaft to maintain alignment during installation.

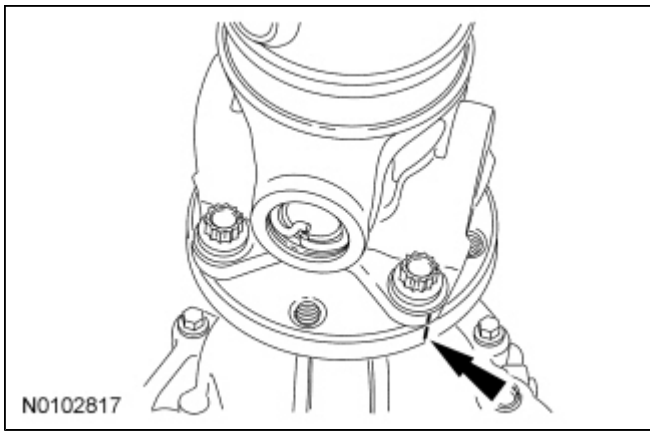


3. Remove and discard the 8 driveshaft flange bolts.
 - To install, tighten the new bolts in a cross pattern to 103 Nm (76 lb-ft).

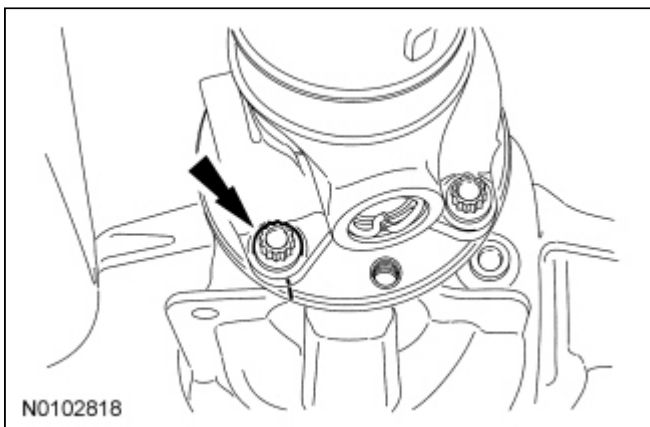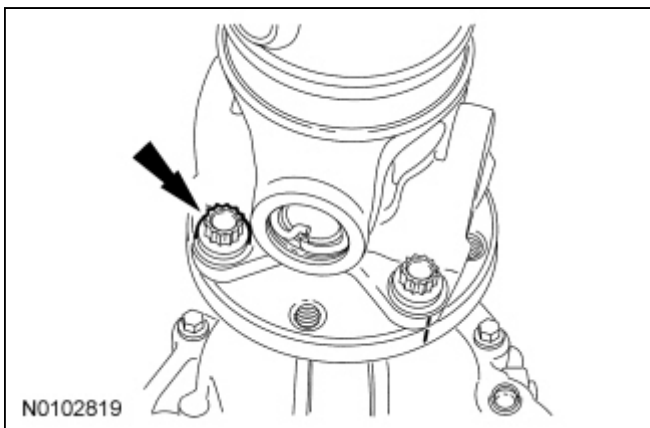

4. **NOTE:** The driveshaft flanges fit tightly on the flange pilots. Never hammer on the driveshaft or any of its components to disconnect the driveshaft flanges from the flange pilots. Pry only in the area shown, with a suitable tool, to disconnect the driveshaft flanges from the flange pilots.

Using a suitable tool as shown, disconnect the driveshaft flanges from the flange pilots and remove the driveshaft.

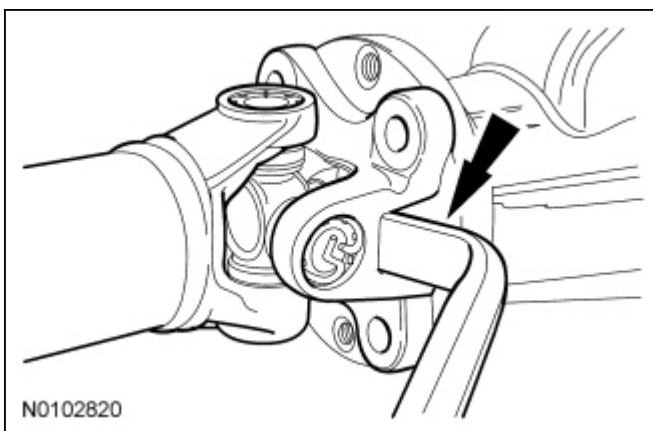

5. **NOTE:** The driveshaft flanges fit tightly on the pinion flange pilots. To make sure that the driveshaft flanges seat squarely on the pinion flange pilots, tighten the driveshaft flange bolts evenly in a cross pattern.

To install, reverse the removal procedure.
