

## Brake Caliper Anchor Plate — 4.0L SOHC and 4.6L (3V)

### Material

Item	Specification
Metal Brake Parts Cleaner PM-4-A or PM-4-B (US); CPM-4 (Canada)	—
Silicone Brake Caliper Grease and Dielectric Compound XG-3-A	ESE-M1C171- A

### Removal and Installation

1. Remove the brake pads. For additional information, refer to [Brake Pads — 4.0L SOHC and 4.6L \(3V\)](#) in this section.
2. **NOTE:** Using specified brake cleaner, clean any residual threadlock compound from the anchor plate threads before installing the bolts.

Remove and discard the 2 anchor plate bolts and remove the brake caliper anchor plate.

- To install, tighten new anchor plate bolts to 115 Nm (85 lb-ft).
3. Inspect the brake caliper anchor plate assembly.
    - Check the guide pins and boots for binding and damage.
    - Replace worn or damaged pins. Lubricate the pins with the specified grease.
    - Install a new brake caliper anchor plate if it is worn or damaged.
  4. To install, reverse the removal procedure.
-