

## Brake Caliper Support Bracket

### Removal and Installation

1. Remove the rear axle shaft. For additional information, refer to [Section 205-02A](#) or [Section 205-02B](#).
2. Remove the 3 bolts and the brake disc shield.
  - To install, tighten to 20 Nm (177 lb-in).
3. **NOTE:** Make sure the anti-moan bracket holes, the brake caliper support bracket and the brake caliper anchor plate holes line up during installation.

Remove the anti-moan bracket.

- To install, tighten to 35 Nm (26 lb-ft).
4. Remove the 4 brake caliper support bracket nuts, bolts and the bracket.
    - To install, tighten to 68 Nm (50 lb-ft).
  5. To install, reverse the removal procedure.
-