

Brake Disc Shield

Removal and Installation

1. Remove the brake disc. For additional information, refer to [Brake Disc](#) in this section.
 2. Remove the 3 bolts and the brake disc shield.
 - To install, tighten to 20 Nm (177 lb-in).
 3. To install, reverse the removal procedure.
-