


Parking Brake Control

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. Remove the floor console. For additional information, refer to [Section 501-12](#).
3. Release the tension on the parking brake cable. For additional information, refer to [Parking Brake Cable Tension Release](#) in this section.
4. Disconnect the front parking brake cable from the 2 rear parking brake cables at the equalizer and release the front cable from the body bracket.

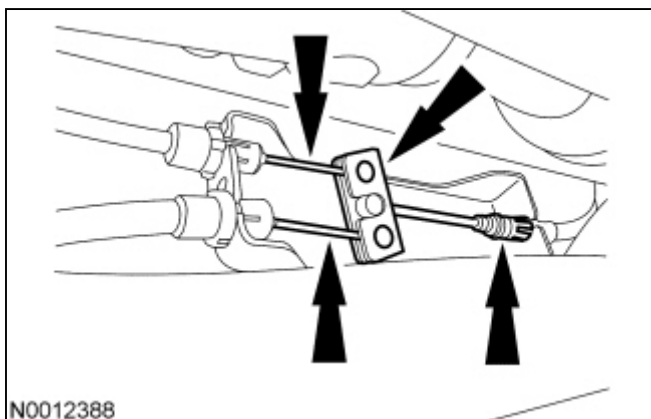

5. Disconnect the parking brake switch electrical connector.
 6. Remove the 2 nuts from the parking brake control.
 - To install, tighten to 17 Nm (150 lb-in).
 7. Remove the 2 bolts from the parking brake control.
 - To install, tighten to 30 Nm (22 lb-ft).
 8. Remove the parking brake control.
 - Position the cable and equalizer through the floorpan.
 9. To install, reverse the removal procedure.
 - Adjust the parking brake cable tension. For additional information, refer to [Parking Brake Cable Adjustment](#) in this section.
-

