

Traction Control Switch

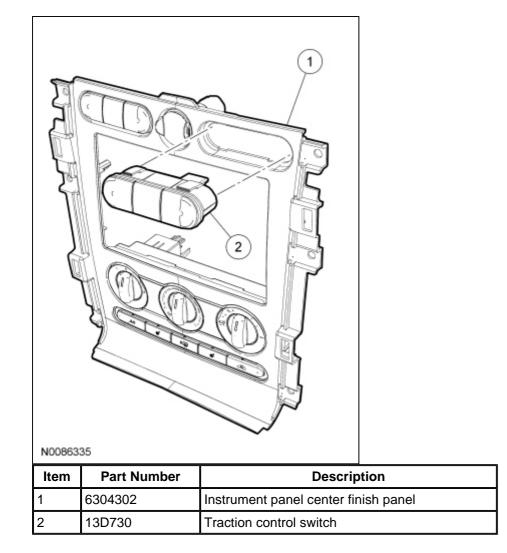

Removal and Installation

- 1. Remove the instrument panel center finish panel. For additional information, refer to Section 501-12.
- 2. Press the retaining tabs and remove the switchblock.

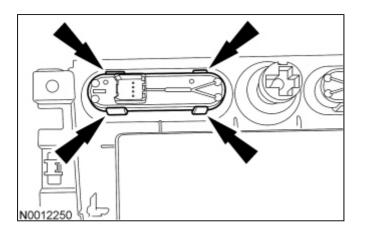

3. To install, reverse the removal procedure.