





Wheel Speed Sensor Ring — Rear

Special Tool(s)

 ST1254-A	Axle Bearing/Seal Plate 205-090 (T75L-1165-B)
 ST1713-A	Installer, Wheel Speed Sensor Ring 206-041 (T89P-20202-A)
 ST1895-A	Pinion Bearing Cone Remover 205-D002 (D79P-4621A) or equivalent

 
Removal

1. Remove the rear axle shaft. For additional information, refer to [Section 205-02A](#) or [Section 205-02B](#).
2. Using the Pinion Bearing Cone Remover, remove the anti-lock brake sensor indicator from the axle shaft.

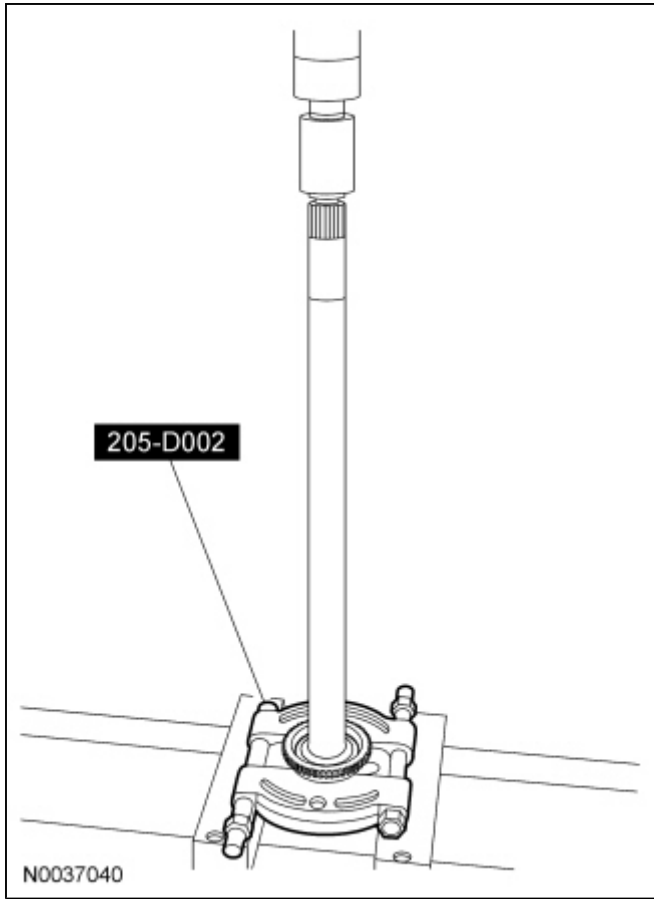


Installation

1. Using the Axle Bearing/Seal Plate and the Wheel Speed Sensor Ring Installer, align the rear anti-lock brake sensor indicator to the rear axle shaft.

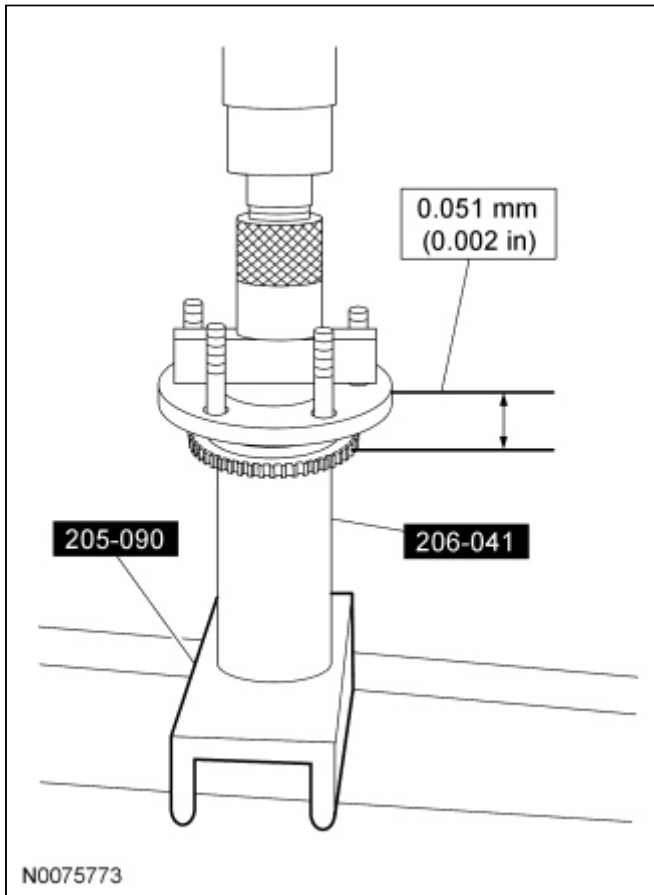

- Using the Axle Bearing/Seal Plate and the Wheel Speed Sensor Ring Installer, press the rear anti-lock brake sensor on the rear axle shaft to specification.

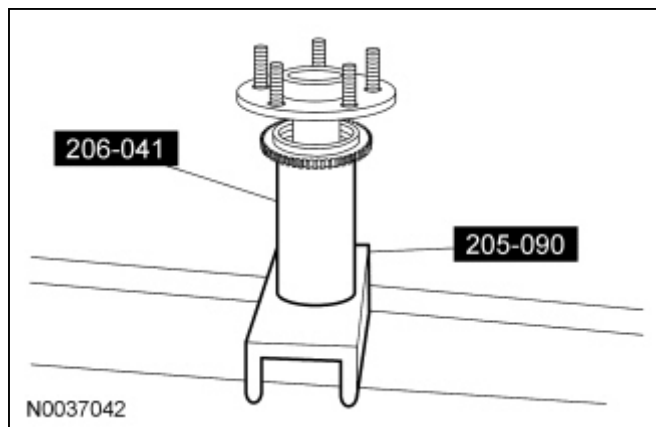

- Install the rear axle shaft. For additional information, refer to [Section 205-02A](#).
-