


Power Steering Pump Pulley — 4.0L

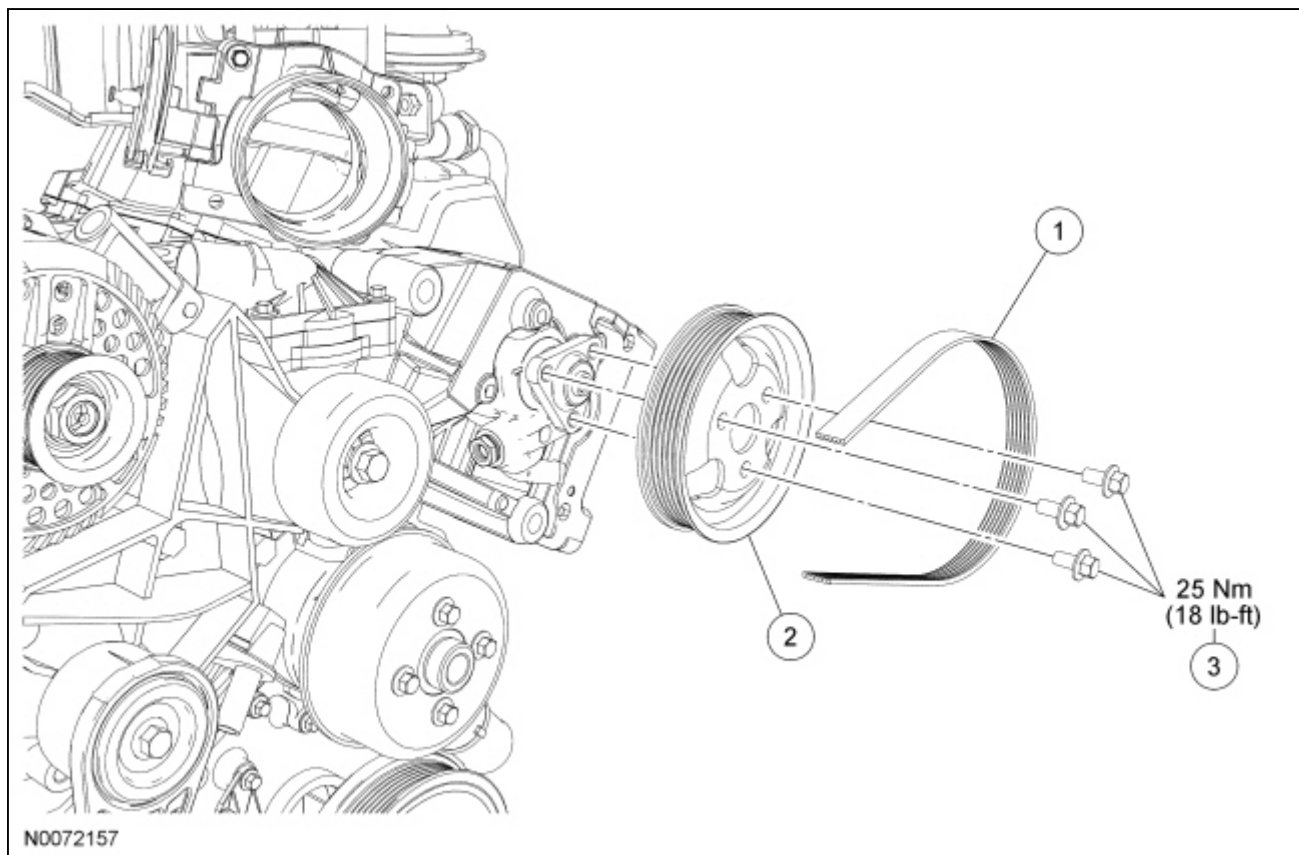

Item	Part Number	Description
1	8620	Accessory drive belt
2	N605784	Power steering pump pulley
3	3A733	Power steering pump pulley bolts (3 required)

Removal and Installation

1. Remove the Air Cleaner (ACL) outlet pipe. For additional information, refer to [Section 303-12](#).
2. Loosen the 3 power steering pump pulley bolts.
3. Rotate the tensioner and remove the accessory drive belt from the power steering pump pulley.
4. Remove the 3 bolts and the power steering pump pulley.
 - To install, tighten to 25 Nm (18 lb-ft).
5. To install, reverse the removal procedure.
 - For additional information on accessory drive belt routing, refer to [Section 303-05](#).

