


Camshaft Lobe Lift

Special Tool(s)

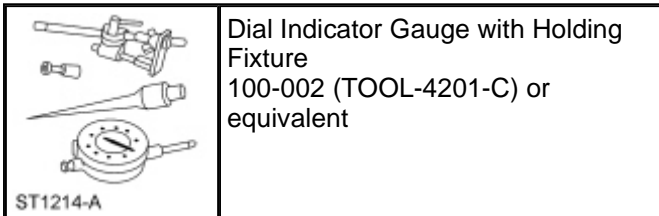

NOTE: Refer to the appropriate Section 303-01 for the specification.

1. Use the Dial Indicator Gauge with Holding Fixture to measure camshaft intake/exhaust lobe lift.
 - Rotate the camshaft and subtract the lowest Dial Indicator Gauge reading from the highest Dial Indicator Gauge reading to figure the camshaft lobe lift.

