


Camshaft Runout

Special Tool(s)

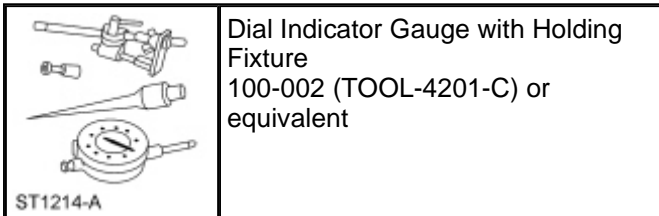

NOTE: Refer to the appropriate Section 303-01 for the specification.

1. **NOTE:** Camshaft journals must be within specifications before checking runout.

Using the Dial Indicator Gauge with Holding Fixture, measure the camshaft runout.

- Rotate the camshaft and subtract the lowest Dial Indicator Gauge reading from the highest Dial Indicator Gauge reading.

