


Connecting Rod Bushing Diameter

NOTE: Refer to the appropriate Section 303-01 for the specification.

1. Use a telescoping gauge to determine the ID of the connecting rod bushing, if equipped.

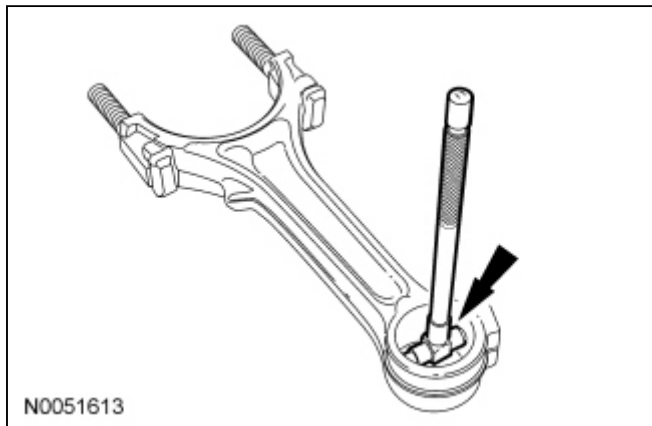

2. Measure the telescoping gauge with a micrometer. Verify the diameter is within specification.

