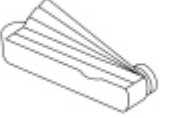


---

## Connecting Rod-to-Piston Clearance

### Special Tool(s)

 <p>ST1271-A</p>	<p>Feeler Gauge Set 303-D027 (D81L-4201-A) or equivalent</p>
---	--

**NOTE:** Refer to the appropriate Section 303-01 for the specification.

1. Using the Feeler Gauge Set, measure the clearance between the connecting rod and the piston. Verify the measurement is within specification.

