

Cylinder Bore Taper

NOTE: Refer to the appropriate Section 303-01 for the specification.

1. Measure the cylinder bore at the top, middle and bottom of piston ring travel in 2 directions as indicated. Verify the cylinder bore is within the wear limit. The difference indicates the cylinder bore taper. Bore the cylinder to the next oversize limit.

