

Flexplate Inspection

1. Inspect the flexplate for:
 1. any cracks.
 2. worn ring gear teeth.
 3. chipped or cracked ring gear teeth.

