


Flywheel Inspection

1. **NOTE:** The flywheel cannot be resurfaced, it must be replaced.

Inspect the flywheel for:

1. any cracks.
2. worn ring gear teeth.
3. chipped or cracked ring gear teeth.
4. scratches, nicks and discoloration.

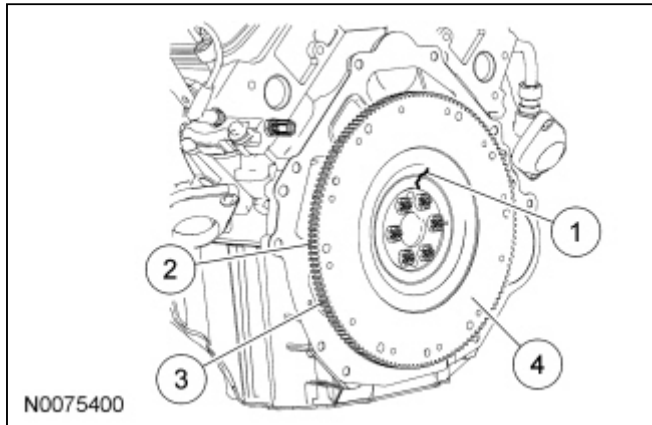

N0075400
