


Piston Ring End Gap

Special Tool(s)

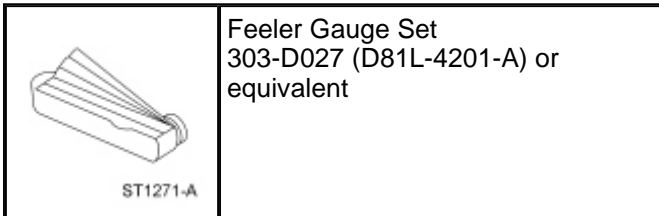


NOTICE: Use care when fitting piston rings to avoid possible damage to the piston ring or the cylinder bore.

NOTE: Piston rings should not be transferred from one piston to another.

NOTE: Refer to the appropriate Section 303-01 for the specification.

NOTE: The cylinder bore must be within specification for taper and out-of-round.

1. Use a piston without rings to push a piston ring in a cylinder to the bottom of ring travel.

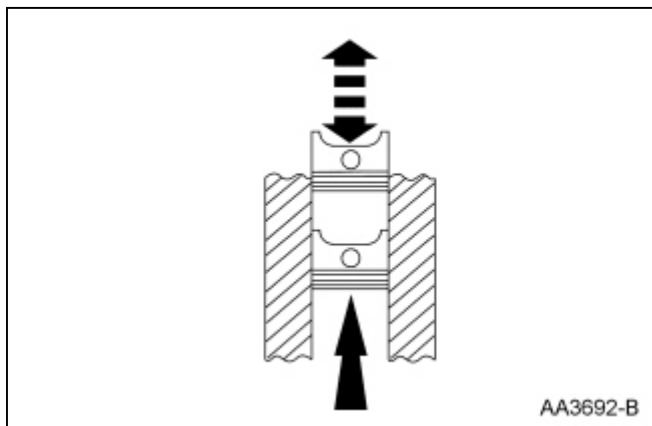

2. Use the Feeler Gauge Set to measure the top piston ring end gap and the second piston ring end gap.

