


Valve Seat Width

NOTE: Refer to the appropriate Section 303-01 for the specification.

1. Measure the valve seat width. If necessary, grind the valve seat to specification.
 - Measure the intake valve seat width.
 - Measure the exhaust valve seat width.
 - Recheck the valve spring installed length after the seats have been ground, and shim the valve springs as necessary to achieve the correct installed spring length.

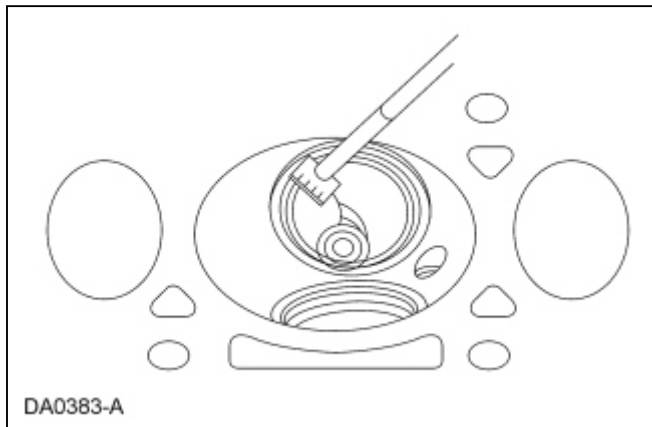

DA0383-A
