


Valve Spring Squareness

1. Measure the out-of-square on each valve spring.
 - Turn the valve spring and observe the space between the top of the valve spring and the square.

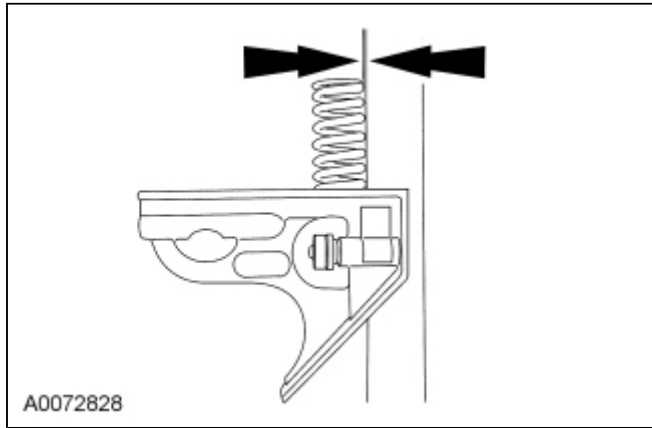

A0072828
