 
Valve Spring Strength

Special Tool(s)



NOTE: Refer to the appropriate Section 303-01 for the specification.

1. Use the Valve/Clutch Spring Pressure Gauge to check the valve spring for correct strength at the specified valve spring length.

