

Oil Pump Screen and Pickup Tube

Removal and Installation

1. Remove the oil pan. For additional information, refer to [Oil Pan](#) in this section.
 2. Remove the bolt and the oil pump screen and pickup tube.
 - To install, tighten to 11 Nm (97 lb-in).
 3. To install, reverse the removal procedure.
-