

Oil Pump

Removal and Installation

1. Remove the cylinder block cradle. For additional information, refer to [Cylinder Block Cradle](#) in this section.
 2. Remove the 2 bolts and the oil pump.
 - To install, tighten to 19 Nm (168 lb-in).
 3. To install, reverse the removal procedure.
-