


Timing Drive Components — Hydraulic Chain Tensioner, LH

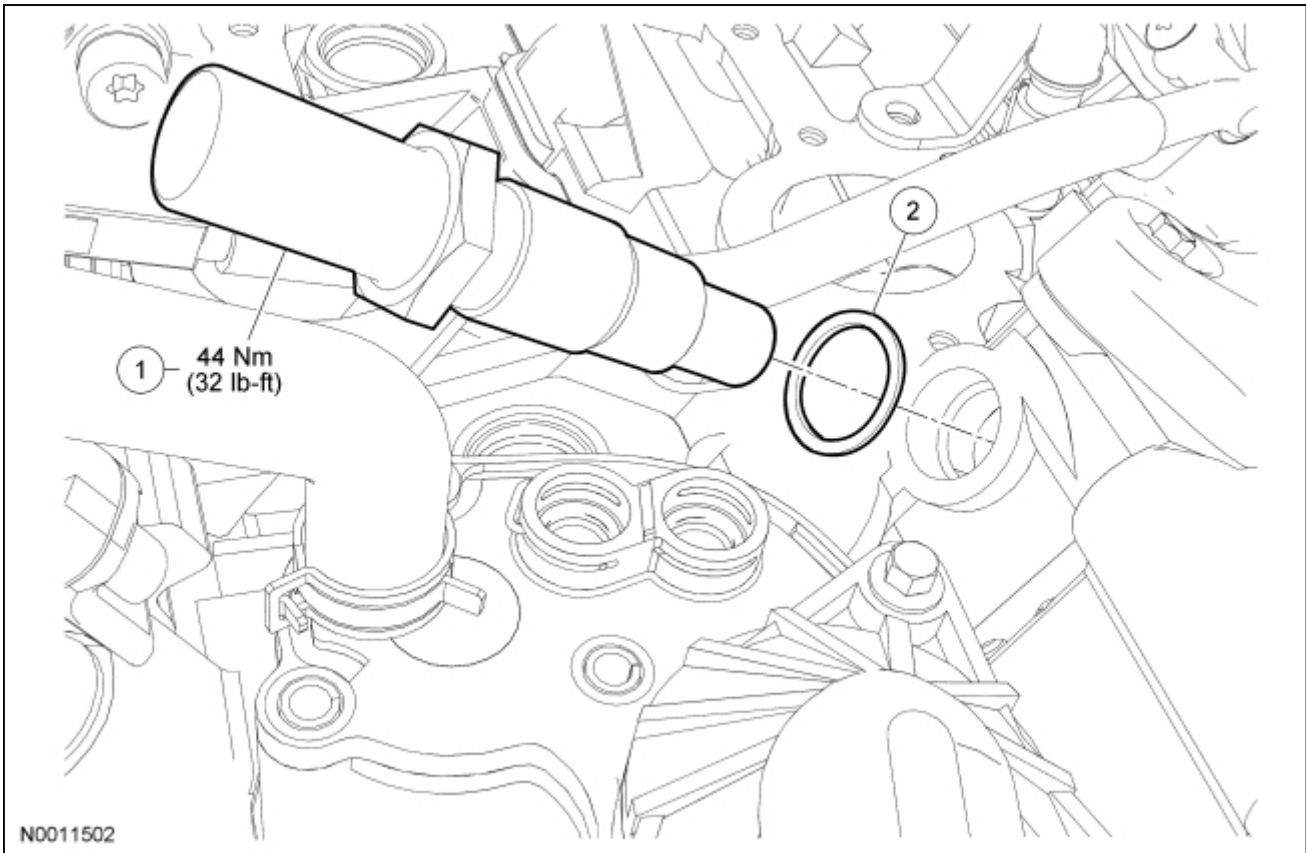

Item	Part Number	Description
1	6K254	LH hydraulic chain tensioner
2	6M252	LH hydraulic chain tensioner washer

Removal and Installation

1. Remove the Engine Coolant Temperature (ECT) sensor. For additional information, refer to [Section 303-14](#).
2. Remove the LH hydraulic chain tensioner.
 - To install, tighten to 44 Nm (32 lb-ft).
3. Remove and discard the washer.
4. To install, reverse the removal procedure.

