


## Timing Drive Components — Hydraulic Chain Tensioner, RH

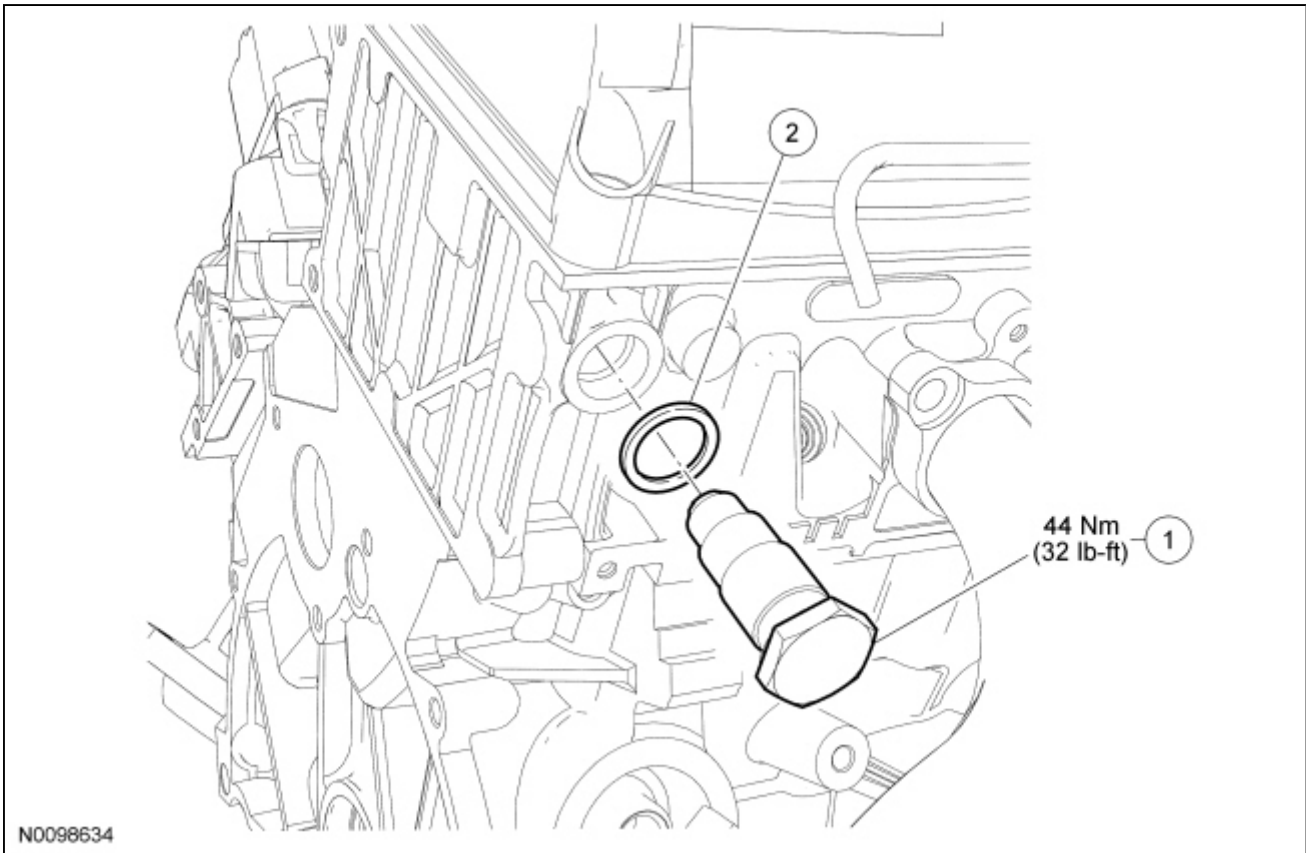

Item	Part Number	Description
1	6K254	RH hydraulic chain tensioner
2	6M252	RH hydraulic chain tensioner washer

### Removal and Installation

1. Remove the RH hydraulic chain tensioner.
  - To install, tighten to 44 Nm (32 lb-ft).
2. Remove and discard the washer.
3. To install, reverse the removal procedure.

