Camshaft Roller Follower

Special Tool(s)



Material

ltem	Specification
Motorcraft® SAE 5W-50 Full Synthetic Motor Oil XO-5W50-QGT or equivalent	WSS-M2C931- B

Removal and Installation


NOTICE: During engine repair procedures, cleanliness is extremely important. Any foreign material, including any material created while cleaning gasket surfaces, that enters the oil passages, coolant passages or the oil pan, can cause engine failure.

- 1. Remove the RH or LH valve cover. For additional information, refer to <u>Valve Cover RH</u> or <u>Valve Cover</u> <u>— LH</u> in this section.
- 2. **NOTE:** If the engine is difficult to rotate while positioning the piston to the bottom of the cylinder, remove the spark plugs.

Position the camshaft lobe at base circle.

3. *NOTICE:* If the roller followers are to be reinstalled, they must be installed in their original positions. Mark the roller followers for installation into their original locations. Failure to follow these instructions may result in engine damage.

Using the Valve Spring Compressor, compress the valve spring and remove the roller follower.

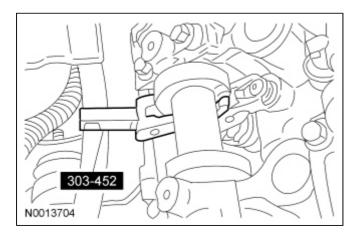

- 4. Repeat the previous 2 steps to remove each of the roller followers.
 - Inspect the roller followers. For additional information, refer to Section 303-00.

- 5. To install, reverse the removal procedure.
 - Lubricate each of the roller followers with clean engine oil prior to installation.