


Oil Level Indicator and Tube

Material

Item	Specification
Motorcraft® SAE 5W-50 Full Synthetic Motor Oil XO-5W50-QGT or equivalent	WSS-M2C931-B

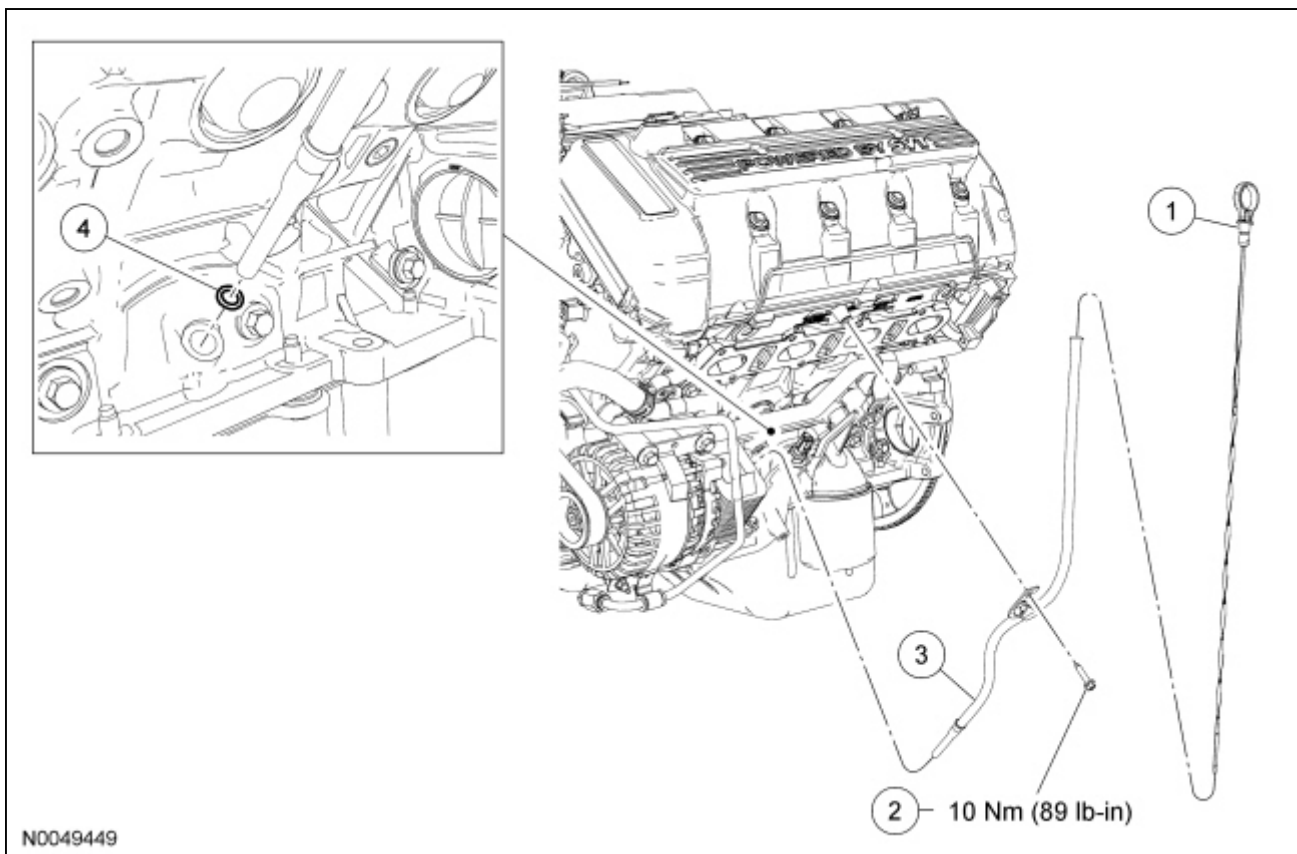

Item	Part Number	Description
1	6750	Oil level indicator
2	N806155	Oil level indicator tube bolt
3	6754	Oil level indicator tube
4	—	O-ring seal

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. Remove the LH exhaust manifold. For additional information, refer to [Exhaust Manifold — LH](#) in this section.
3. Remove the oil level indicator.
4. Remove the oil level indicator tube bolt.
 - To install, tighten to 10 Nm (89 lb-in).

5. Remove the oil level indicator tube.
 - Discard the O-ring seal.
 6. To install, reverse the removal procedure.
 - Lubricate the new oil level indicator tube O-ring seal with clean engine oil prior to installation.
-