


## Throttle Body

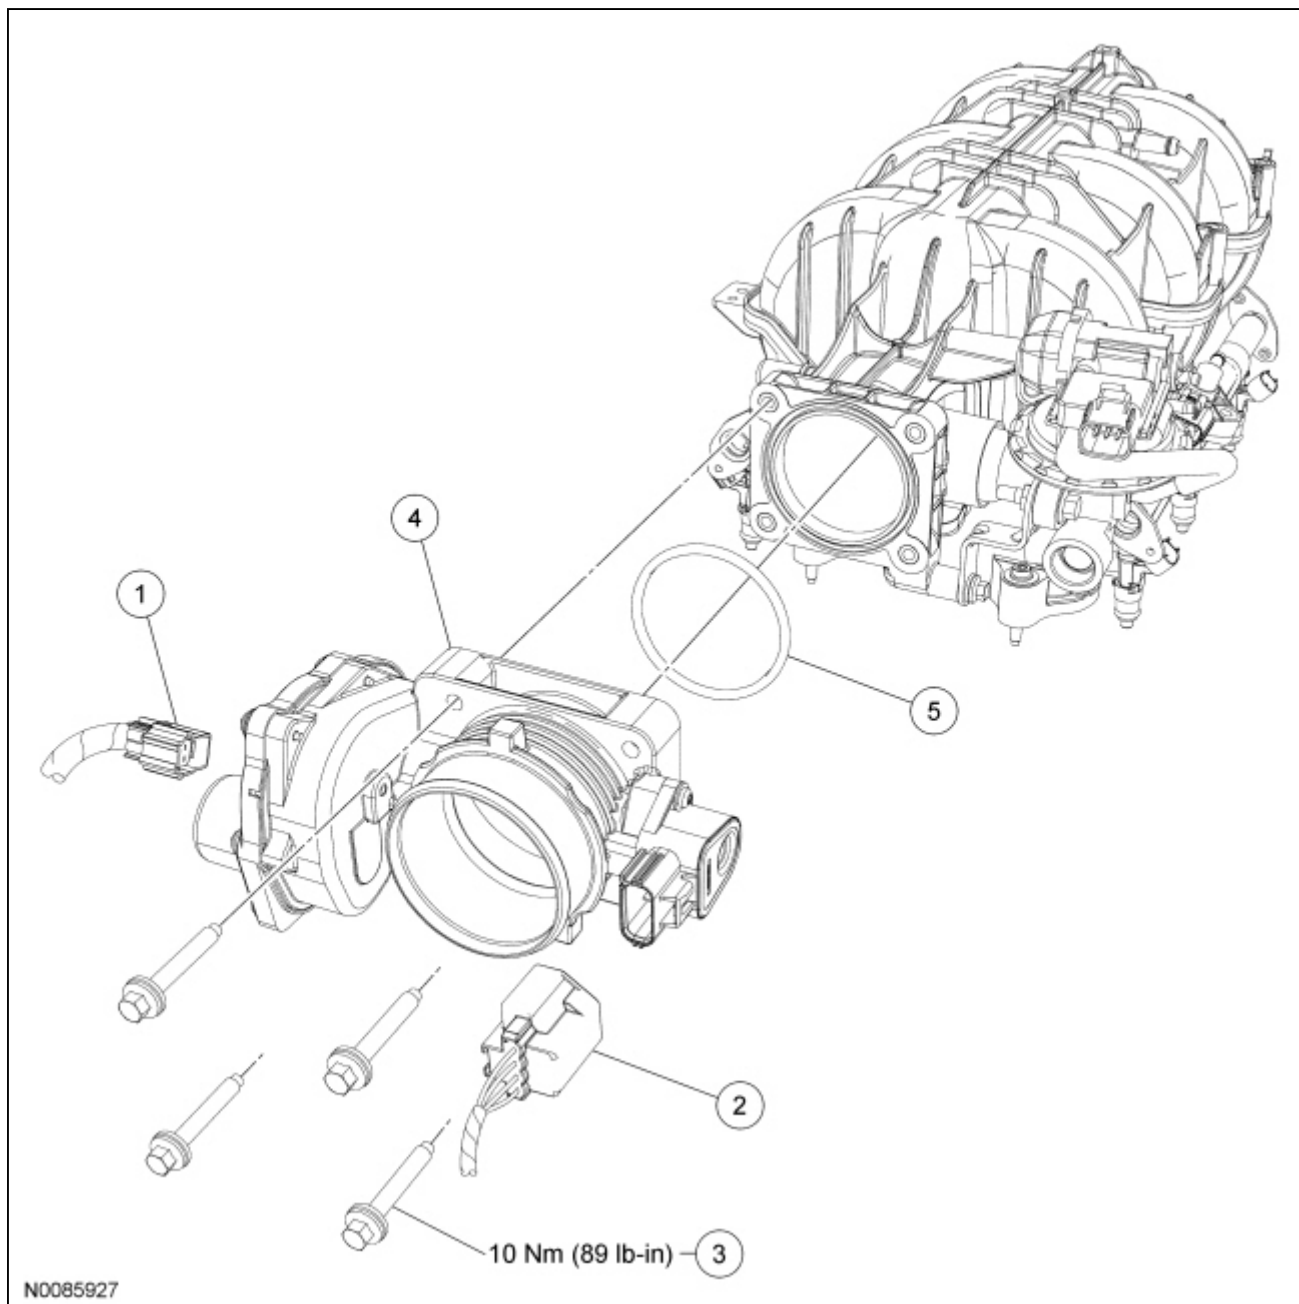

Item	Part Number	Description
1	14A464	Electronic throttle control electrical connector
2	14A464	Throttle Position (TP) sensor electrical connector
3	W503280	Throttle Body (TB) bolt (4 required)
4	9F991	<u>TB</u>
5	—	<u>TB</u> gasket

### Removal and Installation

1. Remove the Air Cleaner (ACL) outlet pipe. For additional information, refer to [Section 303-12](#).
2. Disconnect the Throttle Position (TP) sensor electrical connector.

3. Disconnect the electronic throttle control electrical connector.
4. **NOTE:** Inspect and install a new Throttle Body (TB) gasket as necessary.

Remove the 4 bolts and the TB.

- To install, tighten to 10 Nm (89 lb-in).
5. To install, reverse the removal procedure.
-