

## Fuel Injectors

### Removal and Installation

1. The fuel injectors are serviced with the fuel rail. For additional information, refer to [Fuel Rail and Fuel Injector — Exploded View](#) and [Fuel Rail](#) in this section.
-