

## Accessory Drive Belt — 4.6L (3V)

### Removal and Installation

#### Bullitt vehicles

1. Remove the air cleaner outlet tube. For additional information, refer to [Section 303-12](#).

#### All vehicles

2. Using a suitable belt tensioner release tool, rotate the accessory drive belt tensioner clockwise and remove the accessory drive belt.
3. **NOTE:** Refer to the illustration for correct drive belt routing.

To install, reverse the removal procedure.

