

Accessory Drive Belt Idler Pulley — 4.0L SOHC

Removal and Installation

1. Using a suitable belt tensioner release tool, rotate the accessory drive belt tensioner counterclockwise and remove the accessory drive belt from the accessory drive belt idler pulley.
 2. Remove the bolt and the accessory drive belt idler pulley.
 - To install, tighten to 47 Nm (35 lb-ft).
 3. To install, reverse the removal procedure.
-