

## Accessory Drive Belt Tensioner — 4.6L (3V)

### Removal and Installation

#### Bullitt vehicles

1. Remove the air cleaner outlet tube. For additional information, refer to [Section 303-12](#).

#### All vehicles

2. Using a suitable belt tensioner release tool, rotate the accessory drive belt tensioner clockwise and remove the accessory drive belt from the accessory drive belt tensioner.
  3. Remove the 3 bolts and the accessory drive belt tensioner.
    - To install, tighten to 25 Nm (18 lb-ft).
  4. To install, reverse the removal procedure.
-