

Accessory Drive Belt Tensioner — 5.4L (4V)

Removal and Installation

1. Using a suitable belt tensioner release tool, rotate the accessory drive belt tensioner clockwise and remove the accessory drive belt from the accessory drive belt tensioner.
 2. Remove the bolt and the accessory drive belt tensioner.
 - To install, tighten to 25 Nm (18 lb-ft).
 3. To install, reverse the removal procedure.
-