

Supercharger Belt Tensioner

Removal and Installation

1. Using a suitable belt tensioner release tool, rotate the Supercharger (SC) belt tensioner clockwise and remove the SC belt from the SC pulley.
2. **NOTE:** The SC belt is routed behind the SC belt tensioner.

Remove the SC belt tensioner bolt and tensioner.

- To install, tighten to 48 Nm (35 lb-ft).
3. To install, reverse the removal procedure.
-