

Supercharger Belt

Removal and Installation

1. Remove the accessory drive belt. For additional information, refer to [Accessory Drive Belt — 5.4L \(4V\)](#) in this section.
2. Using a suitable belt tensioner release tool, rotate the Supercharger (SC) belt tensioner clockwise and remove the **SC** belt from the **SC** pulley.
3. **NOTE:** The **SC** belt is routed behind the SC belt tensioner.

Remove the **SC** belt tensioner bolt, the tensioner and the **SC** belt.

- To install, tighten to 48 Nm (35 lb-ft).

4. **NOTE:** Refer to the illustration for correct **SC** belt routing.

To install, reverse the removal procedure.

