


Engine Ignition Components — Exploded View

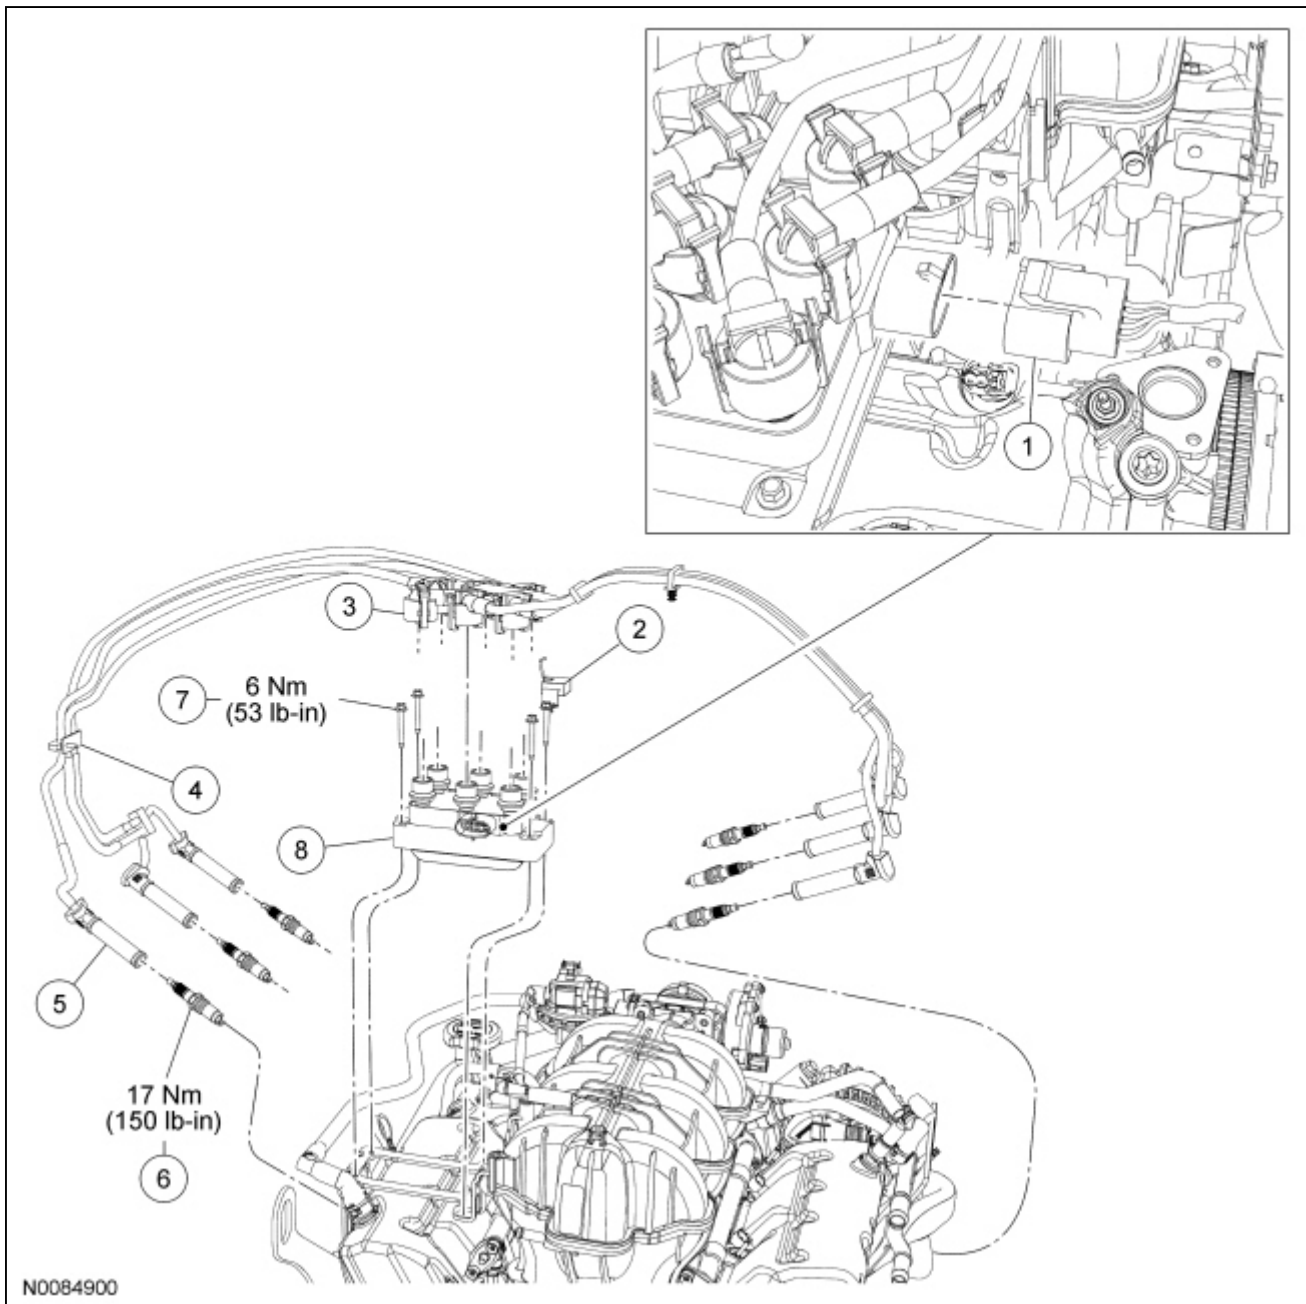

Item	Part Number	Description
1	14A464	Ignition coil electrical connector
2	18801	Radio ignition interference capacitor
3	12286	Spark plug wire-to-ignition coil (6 required)
4	12297	Spark plug wire retainer
5	12286	Spark plug wire-to-spark plug (6 required)
6	12405	Spark plug (6 required)
7	W706216	Ignition coil bolt (4 required)
8	12029	Ignition coil

1. For additional information, refer to the procedures in this section.

