

Ignition Coil

Removal and Installation

1. Disconnect the electrical connector from the ignition coil.
2. **NOTICE:** It is important to twist the spark plug wire boots while pulling upward to avoid possible damage to the spark plug wires.

NOTE: Spark plug wires must be connected to the correct ignition coil terminal.

Disconnect the 6 spark plug wires from the ignition coil.

3. Remove the 4 bolts and the ignition coil.
 - To install, tighten to 6 Nm (53 lb-in).
4. **NOTE:** Be sure to reinstall the radio ignition interference capacitor under the correct mounting bolt.

To install, reverse the removal procedure.
