 


Spark Plugs

Special Tool(s)

 ST1394-A	Remover, Spark Plug Wire 303-106 (T74P-6666-A)
---	---

Material


Item	Specification
Silicone Brake Caliper Grease and Dielectric Compound XG-3-A	ESE-M1C171-A

Removal

1. **NOTICE:** It is important to twist the spark plug wire boots while pulling upward to avoid possible damage to the spark plug wire.

NOTE: Spark plug wires must be connected to the correct spark plug.

Using the Spark Plug Wire Remover, remove the spark plug wires from the spark plugs using a twisting motion.

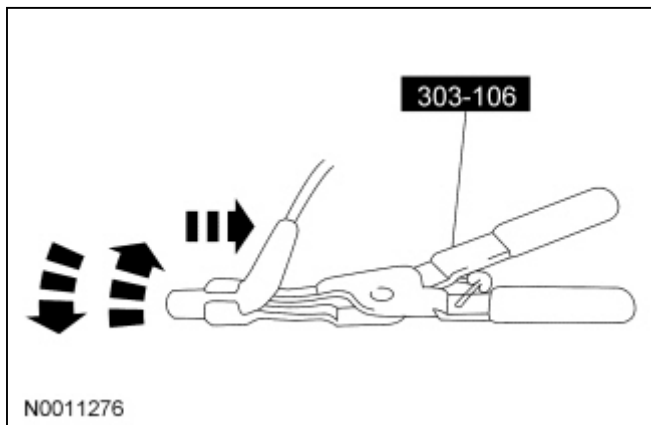

2. **NOTICE:** Only use hand tools when removing or installing the spark plugs, or damage may occur to the cylinder head or spark plug.

NOTE: Use compressed air to remove any foreign material in the spark plug well before removing the spark plugs.

Remove the 6 spark plugs.

Installation

1. **NOTICE:** Only use hand tools when removing or installing the spark plugs, or damage may occur to the cylinder head or spark plug.

Install the 6 spark plugs.

- Tighten to 17 Nm (150 lb-in).

2. Apply silicone brake caliper grease and dielectric compound to the inside of the spark plug wire-to-boots.
3. **NOTE:** Make sure the spark plug boots are positioned so that the spark plug wires do not contact the exhaust manifold, or any sharp edges.

Connect the 6 spark plug wires to the spark plugs.
