



Engine Ignition Components — Exploded View

RH Ignition Components

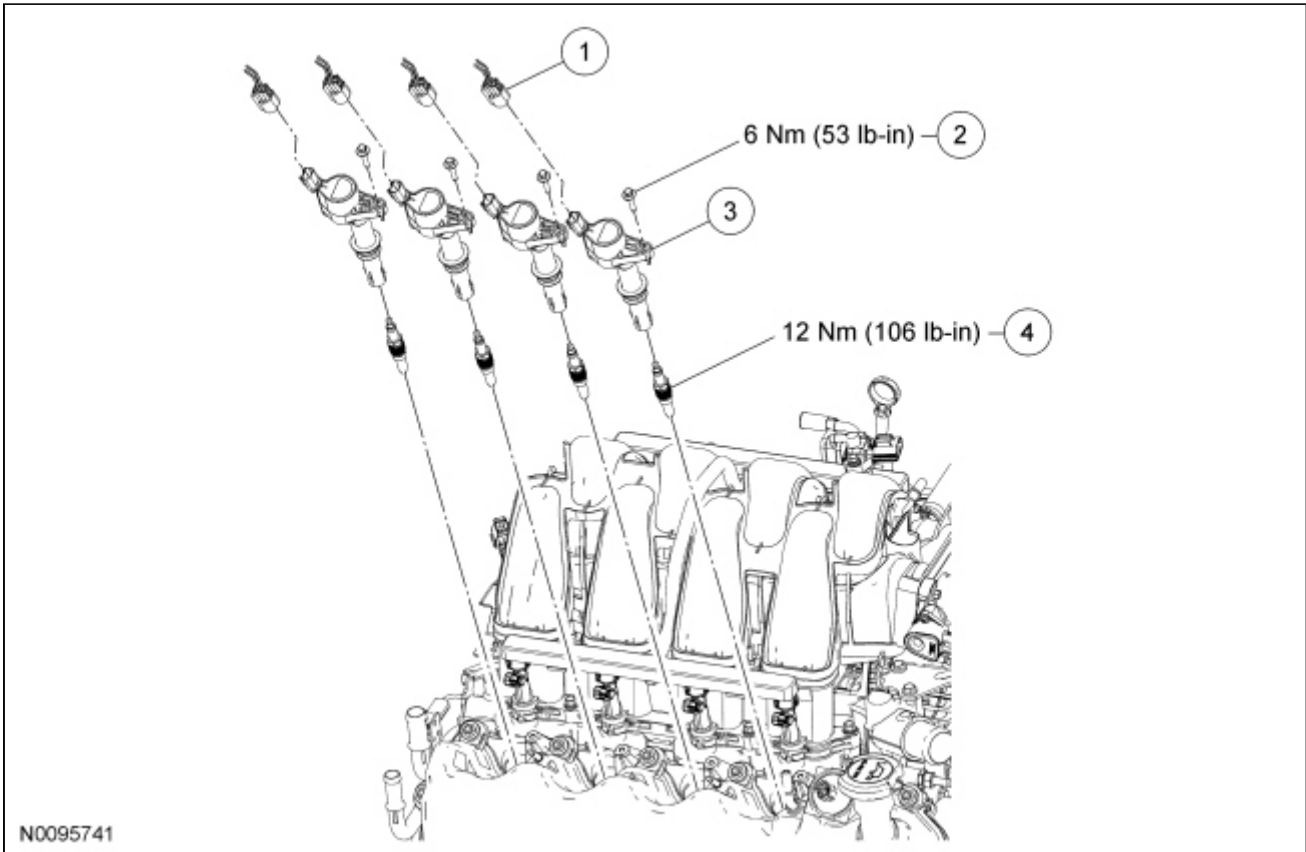

Item	Part Number	Description
1	14A464	Ignition coil-on-plug electrical connector (4 required)
2	W706175	Ignition coil-on-plug bolt (4 required)
3	12A366	Ignition coil-on-plug (4 required)
4	12405	Spark plug (4 required)

LH Ignition Components

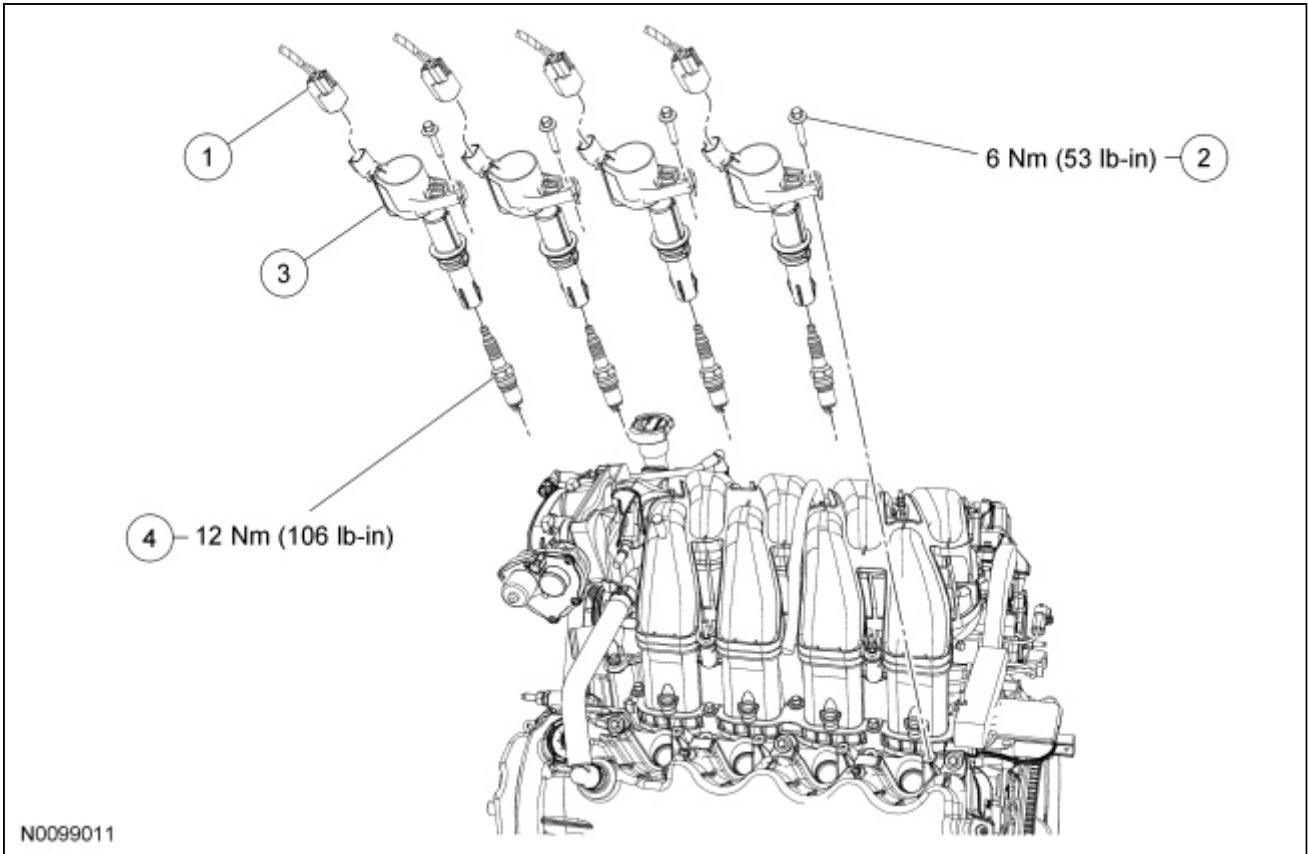

Item	Part Number	Description
1	14A464	Ignition coil-on-plug electrical connector (4 required)
2	W706175	Ignition coil-on-plug bolt (4 required)
3	12A366	Ignition coil-on-plug (4 required)
4	12405	Spark plug (4 required)

1. For additional information, refer to the procedures in this section.
-