Ignition Coil-On-Plug

Material

ltem	Specification
Silicone Brake Caliper Grease and Dielectric Compound XG-3-A	ESE-M1C171- A

Removal and Installation

- 1. Disconnect the 8 ignition coil electrical connectors.
- 2. Remove the 8 ignition coil bolts.
 - To install, tighten to 6 Nm (53 lb-in).
- 3. **NOTE:** When removing the ignition coils, a slight twisting motion will break the seal and ease removal.

Remove the 8 ignition coils.

- 4. To install, reverse the removal procedure.
 - Apply a light film of brake caliper grease to the inside of the coil boots before installation.