



## Engine Ignition Components — Exploded View

### LH Ignition Components

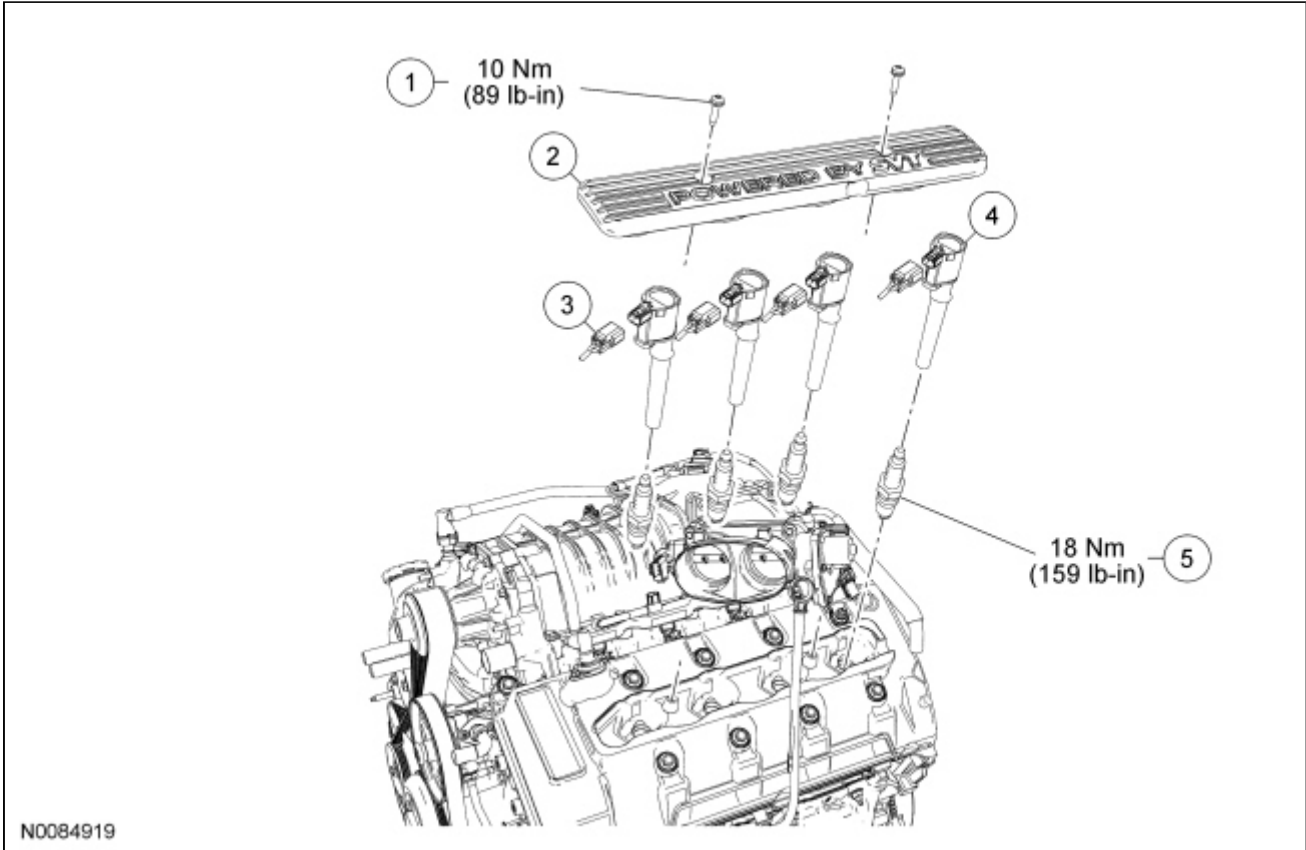

Item	Part Number	Description
1	W701621	Ignition coil-on-plug cover bolt (2 required)
2	6P067	Ignition coil-on-plug cover
3	14A464	Ignition coil-on-plug electrical connector (part of 12B637) (4 required)
4	12A366	Ignition coil-on-plug (4 required)
5	12405	Spark plug (4 required)

### RH Ignition Components

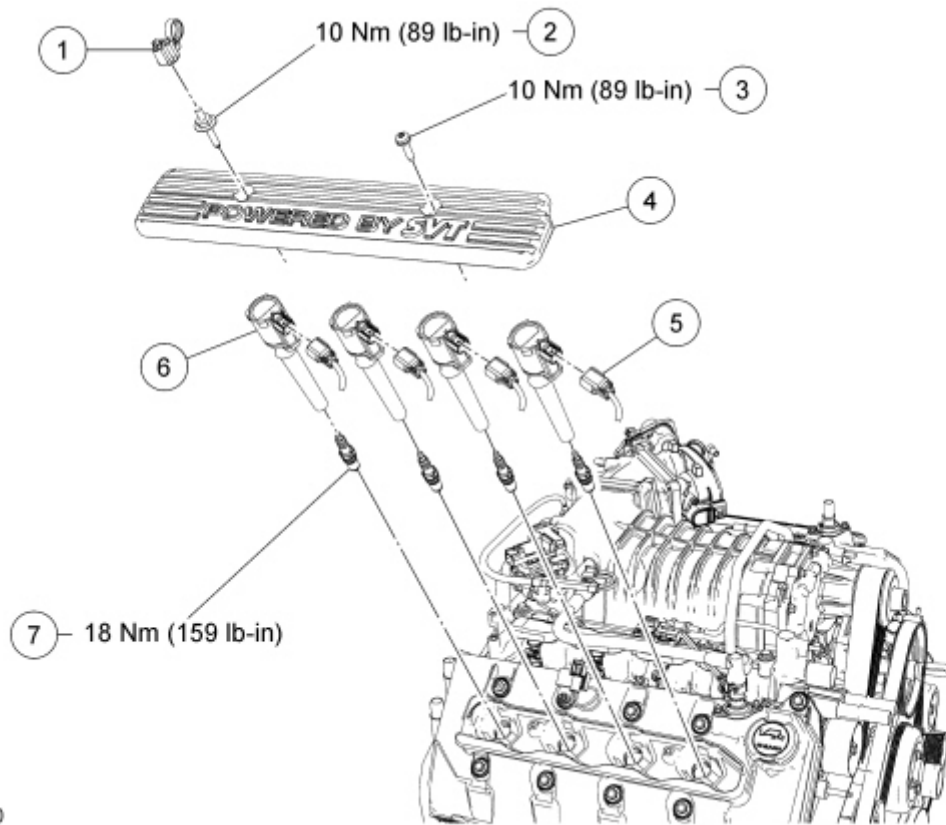

N0084920

Item	Part Number	Description
1	W706827	Wire harness retainer (part of 12B637)
2	W712595	Ignition coil-on-plug cover stud bolt
3	W701624	Ignition coil-on-plug cover bolt
4	6P068	Ignition coil-on-plug cover
5	14A464	Ignition coil-on-plug electrical connector (part of 12B637) (4 required)
6	12A366	Ignition coil-on-plug (4 required)
7	12405	Spark plug (4 required)

1. For additional information, refer to the procedures in this section.

