

## Exhaust Gas Recirculation (EGR) System Module Tube

### Removal and Installation

#### Vehicles with 5.4L 4V engine

1. Remove the battery tray. For additional information, refer to [Section 414-01](#).

#### All vehicles

2. Disconnect the EGR system module tube-to-EGR system module fitting.
    - To install, tighten to 40 Nm (30 lb-ft).
  3. Disconnect the EGR system module tube-to-exhaust manifold fitting and remove the tube.
    - To install, tighten to 40 Nm (30 lb-ft).
  4. To install, reverse the removal procedure.
-