



Positive Crankcase Ventilation (PCV) Valve

4.0L SOHC Engine

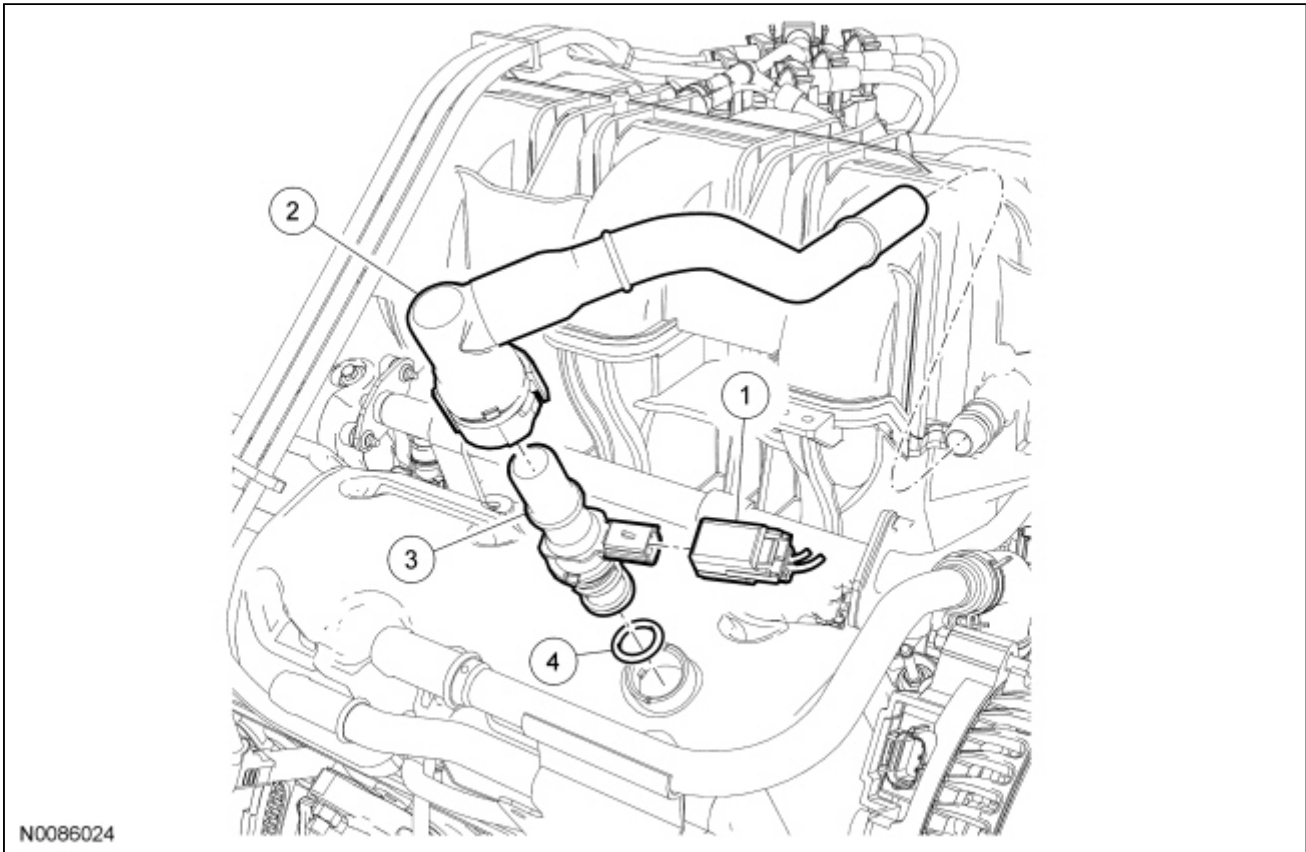

Item	Part Number	Description
1	14A464	PCV valve electrical connector
2	—	Crankcase ventilation tube-to-PCV valve quick connect coupling (part of 6K817)
3	6A666	PCV valve
4	—	PCV valve O-ring seal (part of 6A666)

5.4L 4V Engine

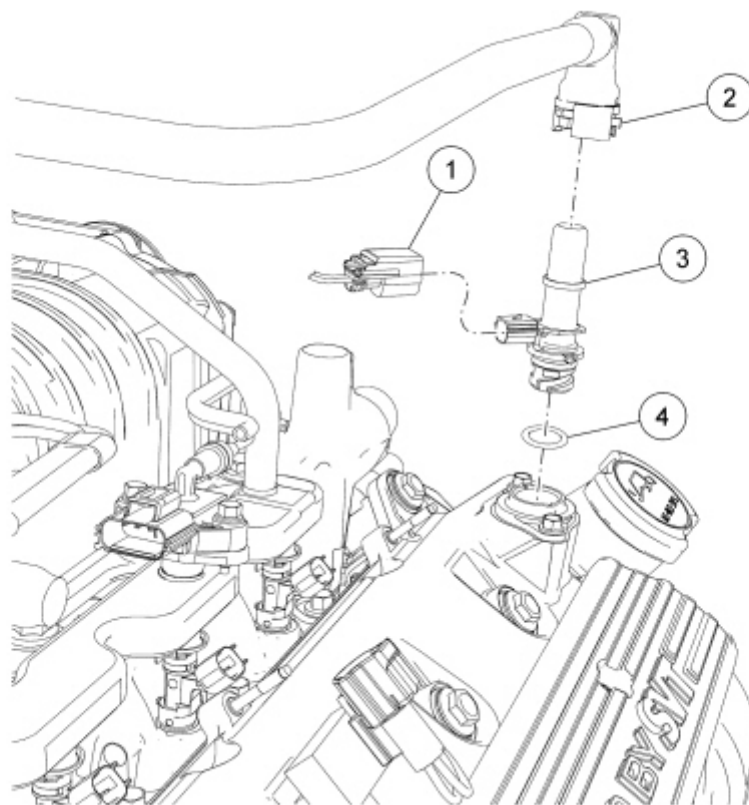

N0086025

Item	Part Number	Description
1	14A464	PCV valve electrical connector
2	—	Crankcase ventilation tube-to-PCV valve quick connect coupling (part of 6K817)
3	6A666	PCV valve
4	—	PCV valve O-ring seal (part of 6A666)

Removal and Installation

1. Disconnect the PCV valve electrical connector.
2. Disconnect the crankcase ventilation tube-to-PCV valve quick connect coupling. For additional information, refer to [Section 310-00](#).
3. **NOTICE: A new positive crankcase ventilation (PCV) valve must be installed if removed. Upon removal, the plastic retaining ears of the PCV valve are sheared.**

Rotate the PCV valve counterclockwise to remove from the valve cover.

- Discard the PCV valve.

4. **NOTE:** Make sure the PCV valve electrical connector is pointing in the correct position to allow the wiring harness to be connected. Incorrect installation would require removal and replacement of the valve.

To install, reverse the removal procedure.

- Install a new PCV valve.

