

Air Cleaner Outlet Pipe

1. Disconnect the crankcase vent tube from the Air Cleaner (ACL) outlet pipe.
 2. If equipped, disconnect the vacuum tube from the ACL outlet pipe.
 3. Loosen the 2 clamps and remove the ACL outlet pipe.
 - To install, tighten to 3 Nm (27 lb-in).
 4. To install, reverse the removal procedure.
-