

Air Cleaner

Removal and Installation

All vehicles

1. Loosen the clamp and disconnect the Air Cleaner (ACL) outlet pipe from the [ACL](#) assembly.
 - To install, tighten to 3 Nm (27 lb-in).
2. Disconnect the Mass Air Flow (MAF) sensor electrical connector.

All vehicles except Bullitt

3. Remove the [ACL](#) assembly bolt.
 - To install, tighten to 8 Nm (71 lb-in).

Bullitt vehicles

4. Remove the [ACL](#) housing nut and bolt.
 - To install, tighten to 8 Nm (71 lb-in).

All vehicles

5. **NOTE:** Make sure that the 2 rubber grommets are retained to the [ACL](#) assembly feet.

Remove the [ACL](#) assembly.

6. **NOTE:** Make sure that the 2 [ACL](#) assembly feet rubber grommets are seated into the locating holes in the fender.

NOTE: The [ACL](#) outlet pipe should be securely sealed to prevent unmetered air from entering the engine.

To install, reverse the removal procedure.
