


Evaporative Emission Canister Purge Valve

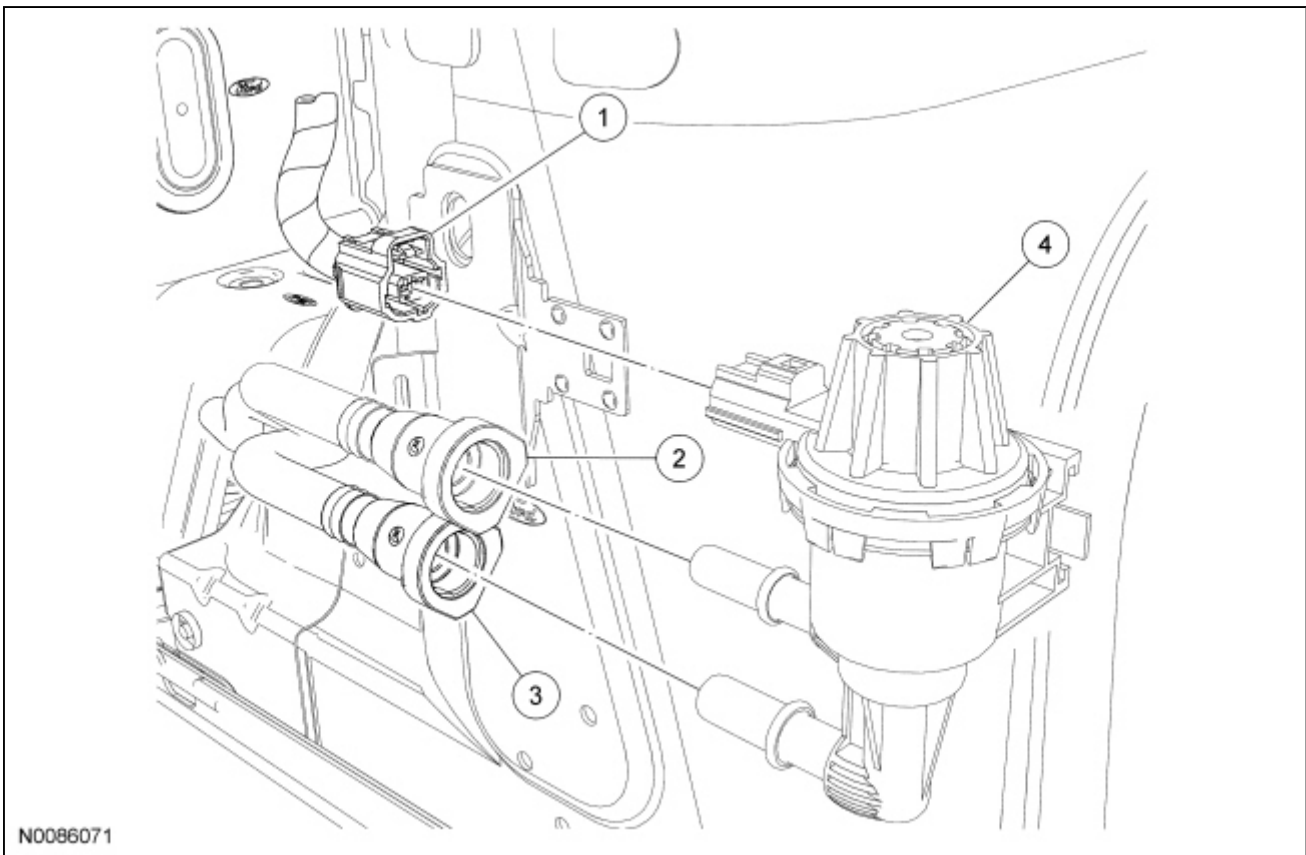

Item	Part Number	Description
1	14A464	Evaporative Emission (EVAP) canister purge valve electrical connector
2	—	Vapor tube-to- EVAP canister purge valve quick connect coupling (part of 9G271)
3	—	Vapor tube-to- EVAP canister purge valve quick connect coupling (part of 9J280)
4	9G683	EVAP canister purge valve

Removal and Installation

⚠ WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.


⚠ WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

⚠ WARNING: Always disconnect the battery ground cable at the battery when working on an evaporative emission (EVAP) system or fuel-related component. Highly flammable mixtures are always present and may be ignited. Failure to follow these instructions may result in serious personal injury.

1. Disconnect the battery ground cable. For additional information, refer to [Section 414-01](#).
2. Disconnect the Evaporative Emission (EVAP) canister purge valve electrical connector.
3. **NOTE:** The upper vapor tube has an identification tag attached on the end of tube near the quick connect coupling. If this vapor tube is removed or replaced make sure that the end with the identification tag is reconnected to the upper [EVAP](#) canister purge valve port.

Disconnect the 2 vapor tube-to- [EVAP](#) canister purge valve quick connect couplings. For additional information, refer to [Section 310-00](#).

4. Depress the release tab and remove the [EVAP](#) canister purge valve from the mounting bracket.

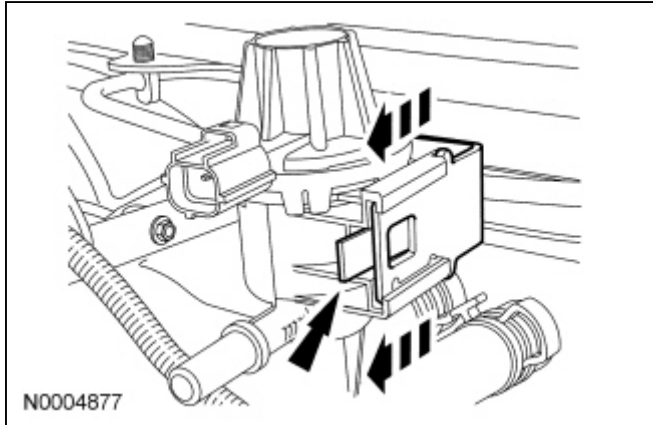

5. To install, reverse the removal procedure.
 - Carry out the Evaporative Emission System Leak Test. For additional information, refer to [Evaporative Emission System Leak Test](#) in this section.
-