


Camshaft Position (CMP) Sensor — 4.6L (3V)

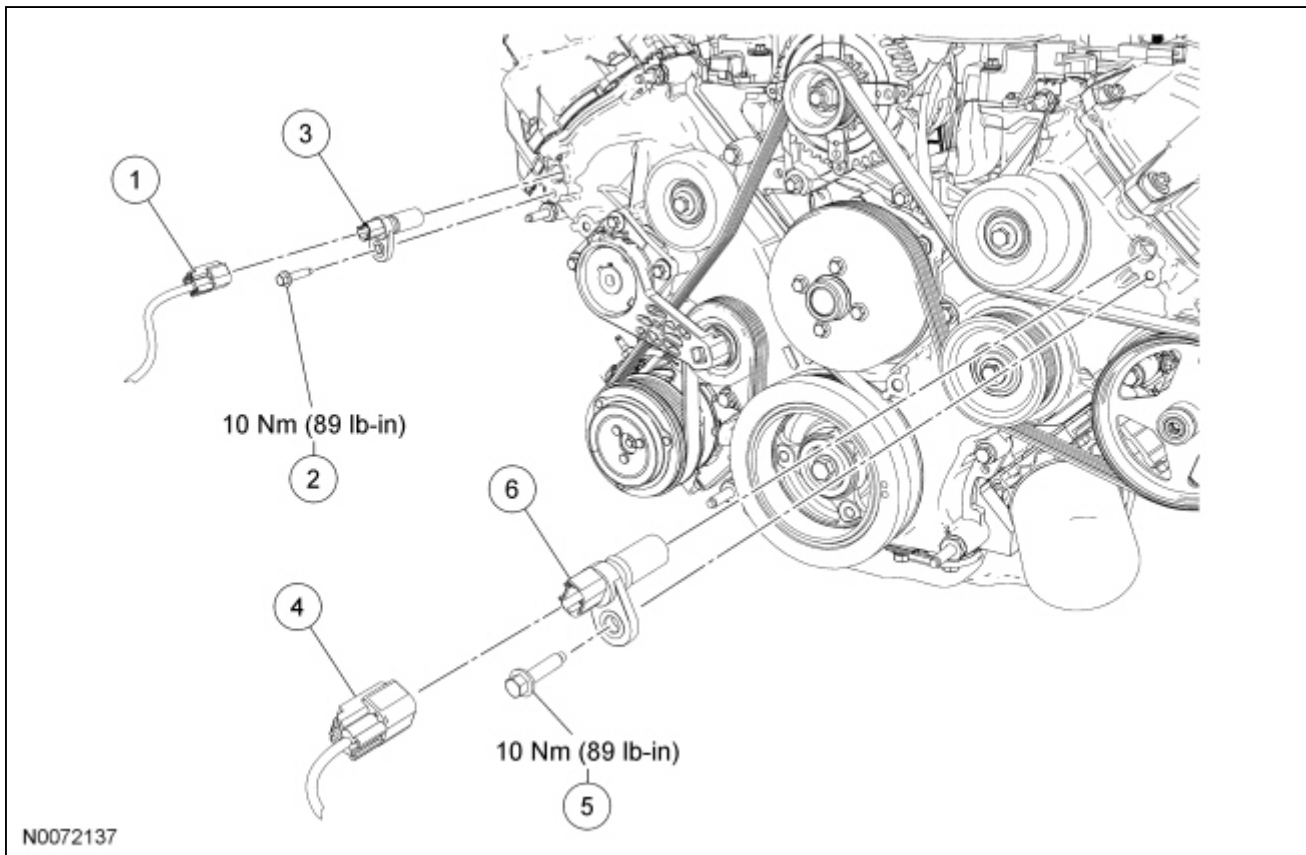

Item	Part Number	Description
1	14A464	RH Camshaft Position (CMP) sensor electrical connector (part of 12B637)
2	N806155	RH CMP sensor bolt
3	6B288	RH CMP sensor
4	14A464	LH CMP sensor electrical connector (part of 12B637)
5	N806155	LH CMP sensor bolt
6	6B288	LH CMP sensor

Removal and Installation

LH side

1. Remove the Air Cleaner (ACL) outlet pipe. For additional information, refer to [Section 303-12](#).

Both sides

2. Disconnect the Camshaft Position (CMP) sensor electrical connector.
3. Remove the bolt and the [CMP](#) sensor.
 - To install, tighten to 10 Nm (89 lb-in).
4. To install, reverse the removal procedure.

