


Crankshaft Position (CKP) Sensor — 4.0L SOHC

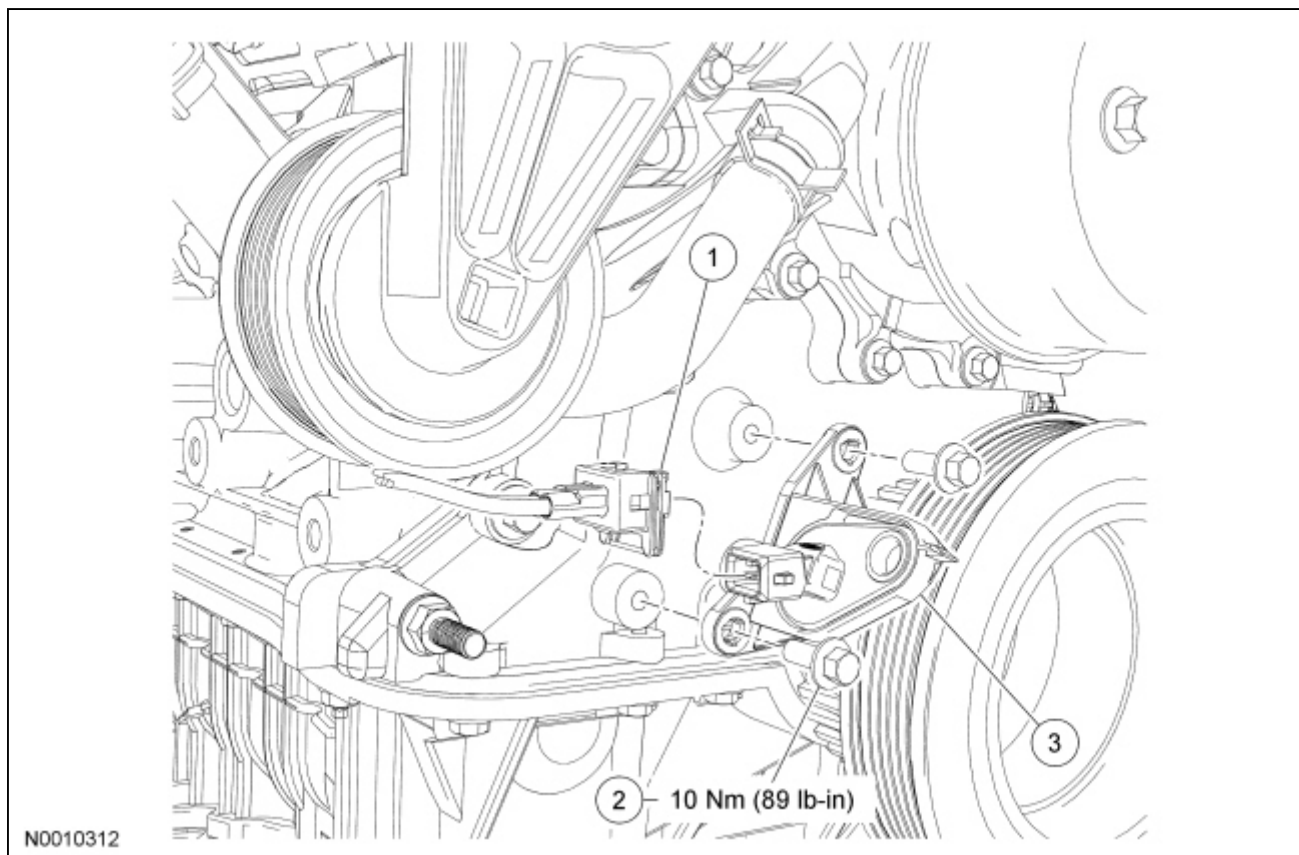

Item	Part Number	Description
1	14A464	Crankshaft Position (CKP) sensor electrical connector
2	W500213	CKP sensor bolt (2 required)
3	6C315	CKP sensor

Removal and Installation

1. With the vehicle in NEUTRAL, position it on a hoist. For additional information, refer to [Section 100-02](#).
2. Disconnect the Crankshaft Position (CKP) sensor electrical connector.
3. Remove the 2 bolts and the [CKP](#) sensor.
 - To install, tighten to 10 Nm (89 lb-in).
4. To install, reverse the removal procedure.

