


Cylinder Head Temperature (CHT) Sensor — 4.6L (3V)

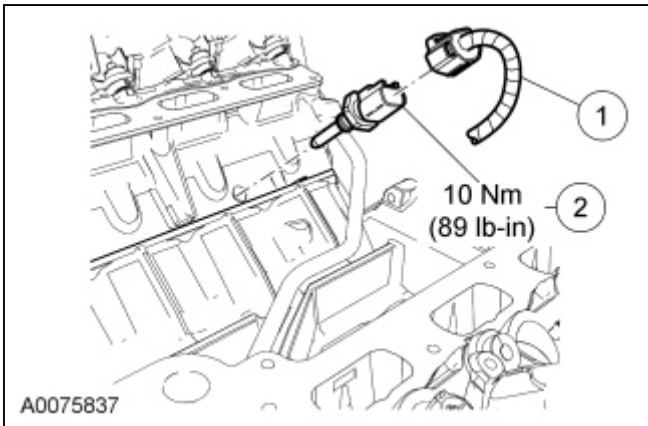

Item	Part Number	Description
1	14A464	Cylinder Head Temperature (CHT) sensor electrical connector (part of 14B102)
2	6G004	<u>CHT</u> sensor

Removal and Installation

1. Release the fuel system pressure. For additional information, refer to [Section 310-00](#).
2. Disconnect the battery ground cable. For additional information, refer to [Section 414-01](#).
3. Remove the intake manifold. For additional information, refer to [Section 303-01B](#).
4. Disconnect the Cylinder Head Temperature (CHT) sensor electrical connector.
5. Remove and discard the CHT sensor.
 - To install, tighten to 10 Nm (89 lb-in).
6. To install, reverse the removal procedure.
 - Do not reuse the CHT sensor. Install a new sensor.

