


Cylinder Head Temperature (CHT) Sensor — 5.4L (4V)

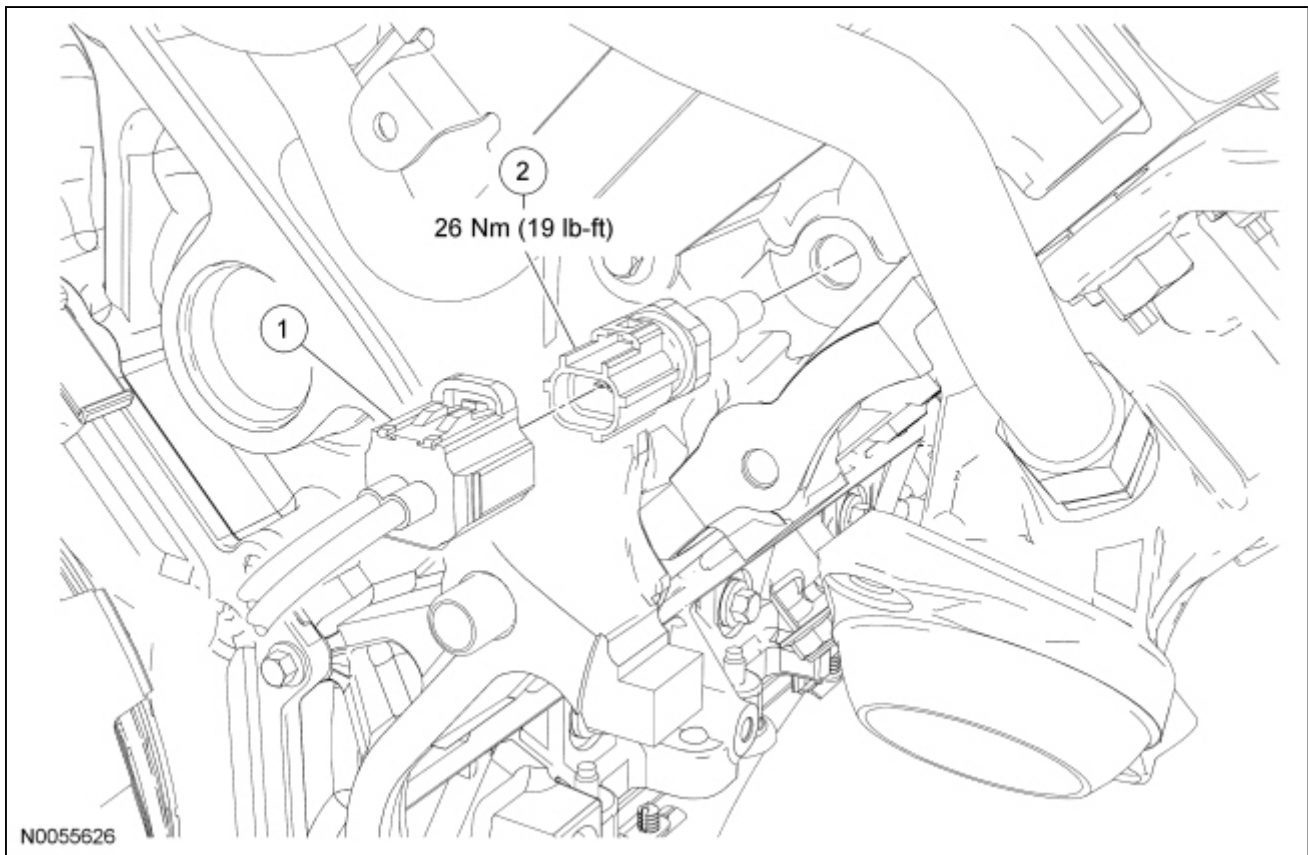

Item	Part Number	Description
1	14A464	Cylinder Head Temperature (CHT) sensor electrical connector
2	6G004	CHT sensor

Removal and Installation

1. Remove the battery tray. For additional information, refer to [Section 414-01](#).
2. Disconnect the Cylinder Head Temperature (CHT) sensor electrical connector.
3. Remove and discard the [CHT sensor](#).
 - To install, tighten to 26 Nm (19 lb-ft).
4. To install, reverse the removal procedure.
 - Do not reuse the [CHT sensor](#), install a new sensor.

