


Engine Coolant Temperature (ECT) Sensor — 4.0L SOHC

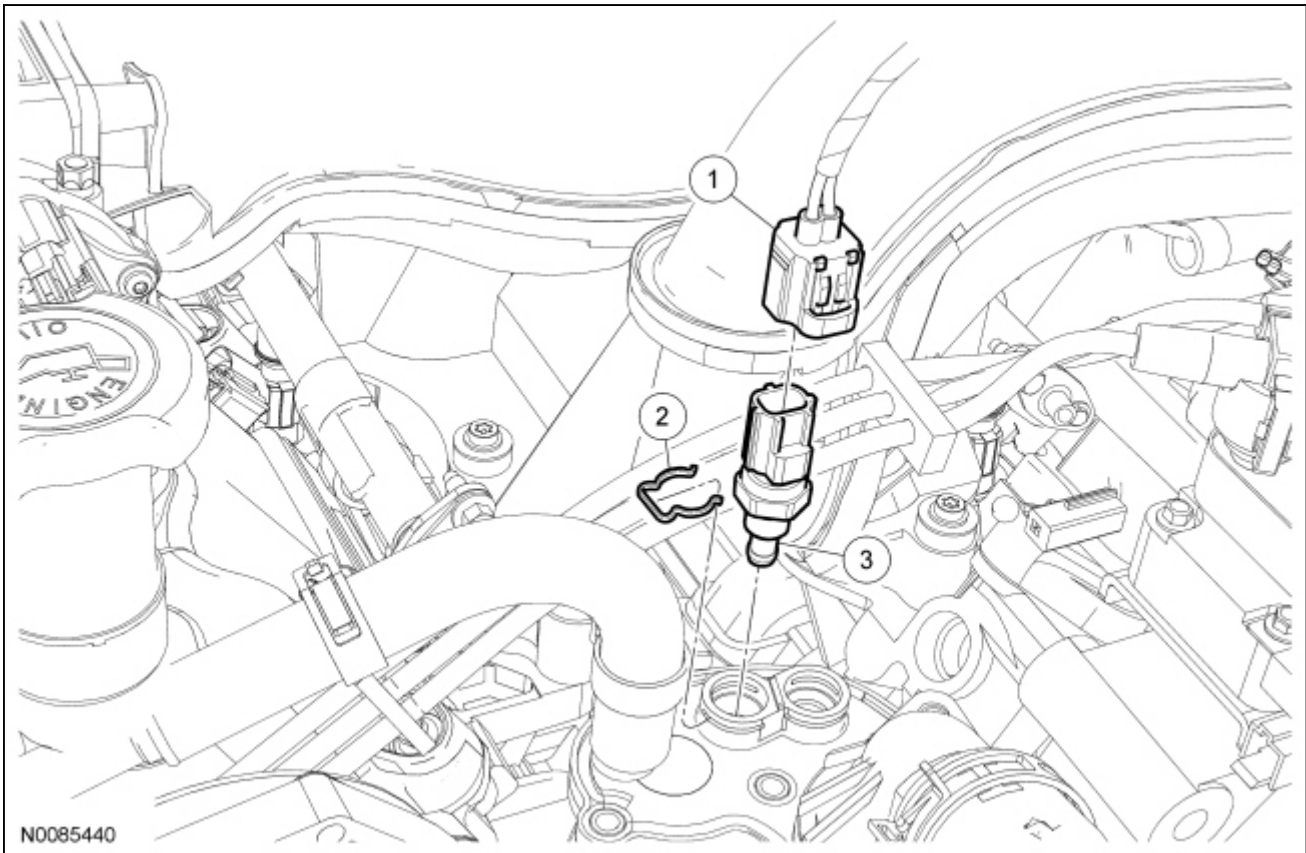

Item	Part Number	Description
1	14A464	Engine Coolant Temperature (ECT) sensor electrical connector
2	—	ECT sensor retaining clip
3	12A648	ECT sensor

Removal and Installation

1. Drain the cooling system. For additional information, refer to [Section 303-03A](#).
2. Disconnect the Engine Coolant Temperature (ECT) sensor electrical connector.
3. Remove the retaining clip and the [ECT](#) sensor.
4. To install, reverse the removal procedure.
5. Fill and bleed the cooling system. For additional information, refer to [Section 303-03A](#).

