


Variable Camshaft Timing (VCT) Oil Control Solenoid — 4.6L (3V)

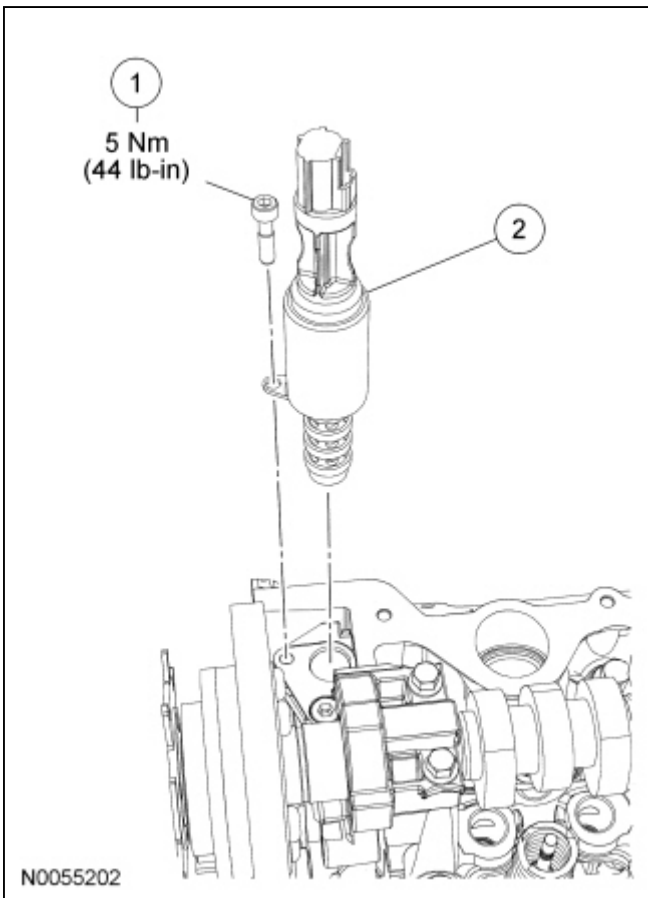

Item	Part Number	Description
1	6C260	Variable Camshaft Timing (VCT) oil control solenoid bolt
2	6B297	<u>VCT</u> oil control solenoid

Removal and Installation

1. Remove the LH or RH valve cover. For additional information, refer to [Section 303-01B](#).
2. Remove the bolt and the Variable Camshaft Timing (VCT) oil control solenoid.
 - To install, tighten to 5 Nm (44 lb-in).
3. To install, reverse the removal procedure.

